




3.05 M x 3.97 M / 10 FT x 13 FT Rectangle Aluminum Cantilever Umbrella with Base

Assembly, Care & Use Manual

ITM. / ART. 1768201

Model: # UMB-241113M

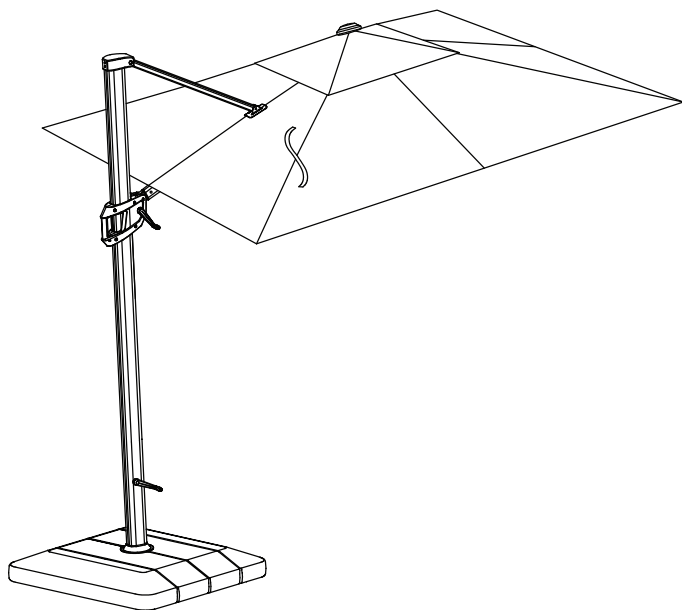

**IMPORTANT, RETAIN FOR FUTURE REFERENCE:
READ CAREFULLY**

For assistance with use, parts, or customer service, please contact:

ATleisure, LLC

Customer Service is available by email at customerservice@atleisure.com or
chat at <https://help.atleisure.com> 8 AM – 5 PM EST, Monday – Friday.

This item is intended for outdoor domestic use only. Not for commercial use.



Designed in USA



Contents


Preparation	2
Tools Required for Assembly (not included)	3
Hardware and Package Contents	3
Assembly Instructions	3-5
Operation Instructions	5-6
Care and Maintenance	7
Warning and Cautions	7
Warranty	8
Filing a Claim	8

Preparation

Before beginning product assembly, completely inspect the umbrella and verify all hardware parts are present. Lay out all hardware contents on a clean, flat surface. Compare the parts with package contents list and diagrams below. If there is damage or any missing parts, do not (1) assemble umbrella, (2) fill bases with sand/water, or (3) return to place of purchase. Customer Service is available by email at customerservice@atleisure.com or chat at <https://help.atleisure.com> 8 AM - 5 PM EST, Monday - Friday.

Estimated Assembly Time: 40 minutes


Tools Required for Assembly: Open-end wrench or adjustable wrench (not included)

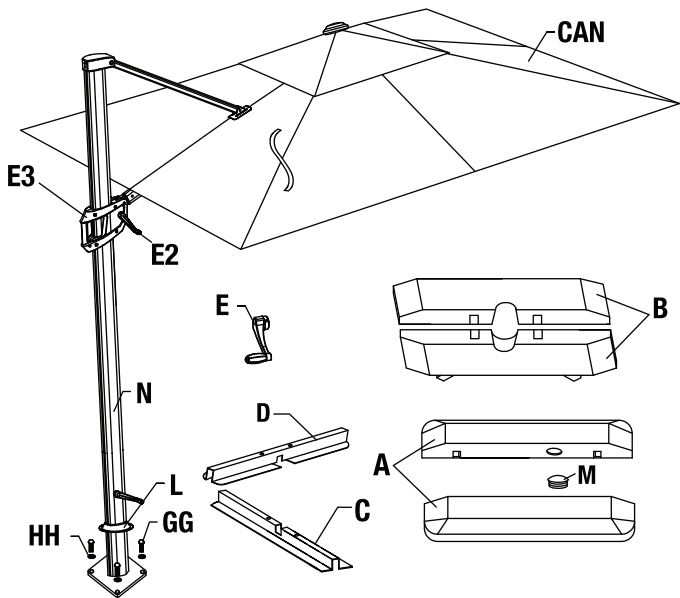

Tools Required for Assembly (not included)

Picture	Description	Quantity
	Adjustable Wrench	1
	Sand Bags (159 kg / 350 lbs)	7

Hardware Contents

Part	Picture	Description	Quantity
GG		Outer Hex Bolt M10-1.5x20A2-70	4
HH		Flat Washer M10A2-70	4

Package Contents

Part	Description	Quantity
A	Blow Molded Base Outside	2
B	Blow Molded Base Inside	2
C	Lower Cross Leg	1
CAN	Canopy (on the umbrella frame)	1
D	Upper Cross Leg	1
E	360° Crank Handle	1
E2	Canopy Crank Handle	1
E3	Canopy Glide Handle	1
L	Pole Support Cap	1
M	Blow Molded Base Cap	4
N	Umbrella Frame (with canopy)	1

Assembly Instructions




CAUTION: Do not use sharp tools or equipment such as a knife or scissors when removing the protective material; it may damage the product. Be careful not to throw away small parts such as bolts, washers, etc. that may be wrapped in the protective materials.



CAUTION: An additional person is suggested to assist with inserting the umbrella frame into the pole holder.

Assembly Instructions (cont.)

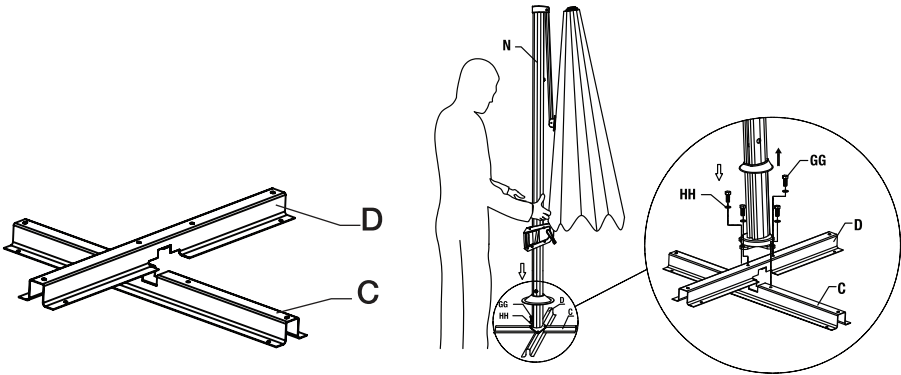


Step 1: Place lower cross leg (C) on ground, line up notches and place upper cross leg (D) over lower cross leg (C).

Step 2: Attach the umbrella frame (N) to cross legs by using bolts (GG) and washers (HH) found in blister pack. Lift the pole support found in blister pack. Lift the pole support cap (L) up to align holes on bottom of umbrella frame with holes on top of cross legs (C,D). Use one washer and one bolt per hole, do not overtighten. Adjust the umbrella frame to be sure it is positioned correctly on base. Finally, tighten bolts with adjustable wrench or open end wrench (not included).



WARNING: Before opening umbrella, complete assembly as instructed in manual. Fill each section of base with sand. Add WATER to wet the sand and continue to fill each section with water up to top. Cover hole with cap. It is recommended at least 159 kg (350 lbs) of weight be placed on crossed legs to ensure stability. Failure to do will result in a weight imbalance and cause umbrella to tip, causing damage and/or personal injury.

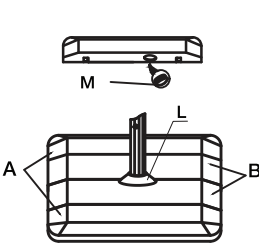


Minimum 159 kg / 350 lbs Sand and Water

B 	Use <u>1.5 bag</u> of sand in each <u>B piece</u> , then add water up to top. 68.75 kg/150 lbs 3 bags
A 	Use <u>2 bags</u> of sand in each <u>A piece</u> , then add water up to top. 91 kg/200 lbs 4 bags

***Sand bags not included**


Step 3: Fill each base (A & B) with sand and fasten cap (M). Place each base section onto the cross legs as shown in diagram, lift support cap (L) for the two inside base sections. When finished, slide the pole support cap down to rest on top of the blow molded base.

Assembly Instructions (cont.)

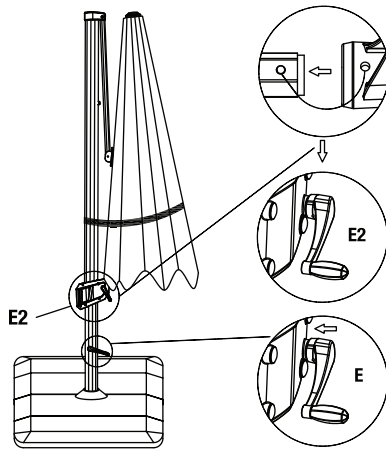

Step 4: Attach 360° crank handle (E) to pole and canopy crank handle (E2) onto canopy glide handle (E3). Align pin hole on both crank handles to corresponding pins to lock.


Operation Instructions

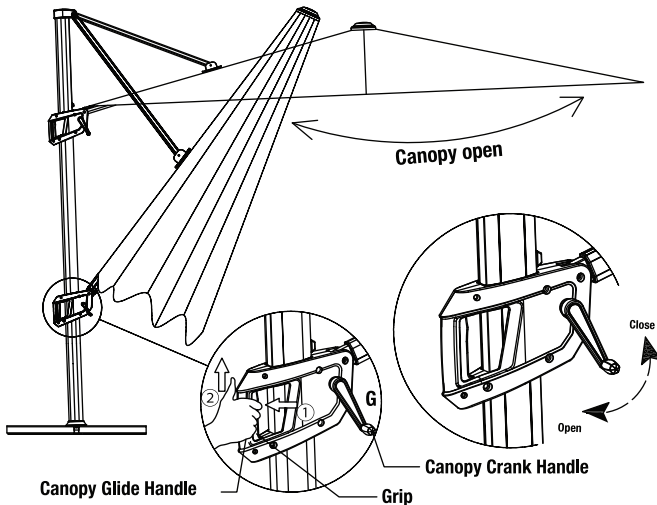


Step 1: Unfasten storage straps around canopy and pole.

Step 2: To open umbrella, squeeze grip on canopy glide handle (E3) and slide up or down on pole to achieve desired canopy angle. Release grip to lock umbrella canopy frame into place. To open canopy, turn canopy crank handle (E2) clockwise until canopy is fully opened.

Operation Instructions (cont.)

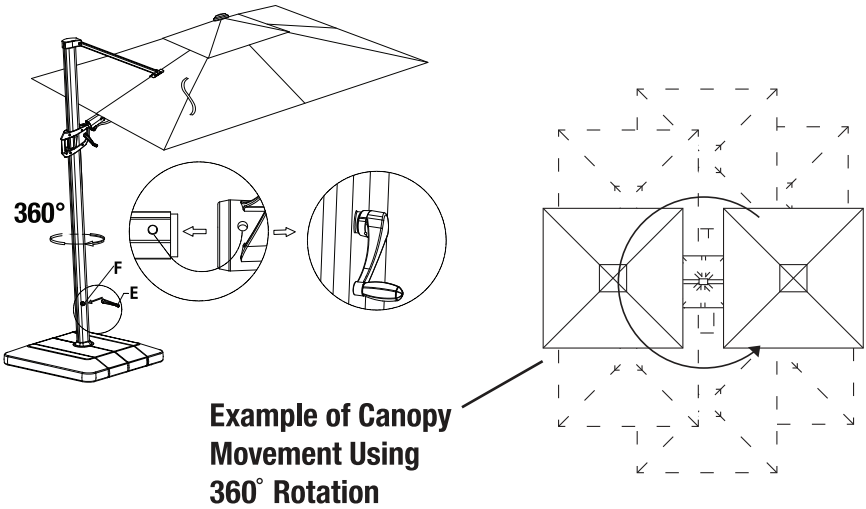

Step 3: The umbrella frame with canopy can be rotated 360°. To rotate umbrella, turn 360° crank handle (E) located on bottom of pole (F) either direction to the desired angle.

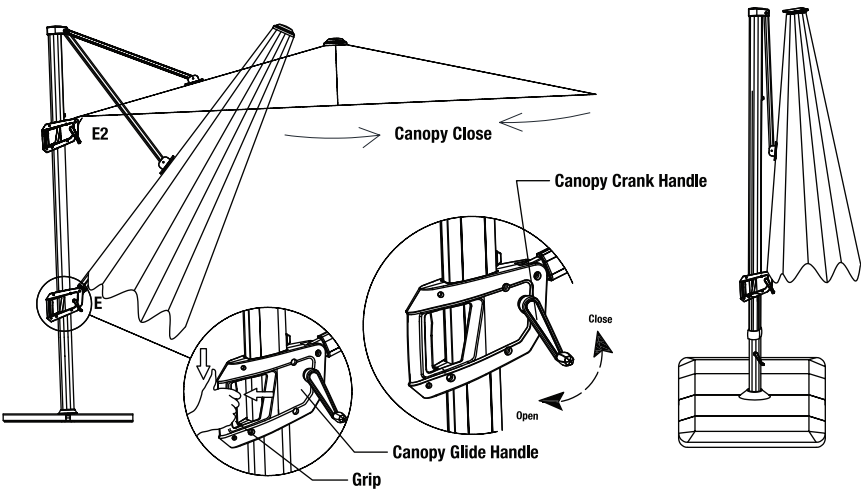

Step 4: To close umbrella, turn canopy crank handle (E2) counter-clockwise until canopy is fully closed. Squeeze grip on canopy glide handle (E3) and slide it down pole; release grip to lock it in place. Canopy frame should be vertically upright. Fasten storage straps around canopy and pole.

Care and Maintenance

See enclosed Sunbrella® care and cleaning label sewn into interior seam located on outer edge of the umbrella canopy.

Warning and Cautions

	DANGER: Keep children out of the assembly area during assembly.
	WARNING: Read all instructions before beginning and follow the steps outlined. Failure to assemble and install as instructed could result in the umbrella tipping over causing personal injury and/or property damage.
	WARNING: Do not open umbrella in windy conditions, as it could be blown over and cause personal injury or damage. To secure umbrella properly, either bolt it directly to your deck or patio, or use a properly weighted umbrella base. Keep umbrella away from glass tabletops during windy conditions to prevent breakage. Warranty does not cover damage due to neglect, abuse or poor weather conditions.
	CAUTION: Assemble and use umbrella on flat ground.
	CAUTION: Place the base in the desired location for use before filling. Once the base full, it will be harder to move.
	IMPORTANT: Check the tightness of bolts at least every 90 days.
	INFORMATION: Be sure to secure and/or weight the base of the umbrella.
	INFORMATION: Close the umbrella and use the canopy storage straps when umbrella is not in use. If the umbrella is stored off season in a box, the solar panel and battery pack must be removed to avoid damage.
	INFORMATION: Schematics in this manual are for assembly and operation illustration only. They may differ from the umbrella's actual appearance.
	INFORMATION: Placement of the umbrella over or near a swimming pool will cause premature fading not covered under our warranty, especially darker colors. Please contact customer service to purchase a replacement canopy.
	INFORMATION: It is suggested that the consumer use a cover (not included) to protect umbrella against the elements.

Warranty

This product is covered under a manufacturer's 2-year warranty from date of purchase against defects in materials and workmanship. This warranty does not cover damage due to neglect, abuse or weather related damage. For full warranty disclosure, email us at customerservice@atleisure.com or chat with us at <https://help.atleisure.com>

NOT COVERED UNDER WARRANTY

This warranty excludes the following: acts of nature (i.e. wind, fire, freezing); damage caused by improper assembly, accident, disaster, misuse, abuse, or negligence and discoloration or fading of the finish as a result of exposure to the elements. Product not intended for commercial use. This warranty gives you specific rights, and you may also have other rights which may vary from state to state.

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Filing a Claim

If you are within your warranty, you may file a claim by sending your receipt and pictures of your damaged umbrella to Atleisure at:

Email: customerservice@atleisure.com or chat with us at <https://help.atleisure.com> 8:00 AM to 5:00 PM EST (Monday - Friday)



www.atleisure.com
ATLANTA, GEORGIA, USA
Customer Service is available by email at
customerservice@atleisure.com or chat at
<https://help.atleisure.com> 8 AM – 5 PM EST, Monday – Friday.




3.05 M x 3.97 M / 10 FT x 13 FT
長方形アルミニウムカンチレバー
アンブレラ(ベース付き)

組み立て、お手入れ、使用マニュアル

ITM. / ART. 1768201

モデル : # UMB-241113M

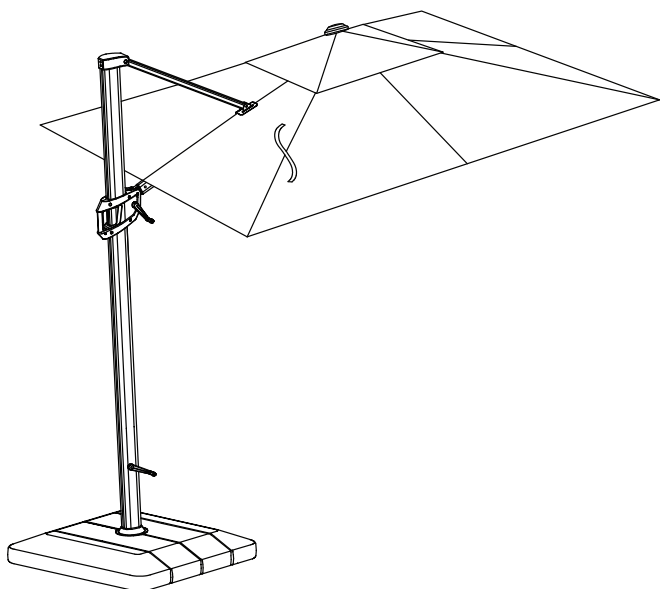

重要、将来の参照用に保管してください：
よくお読みください

使用、部品、カスタマーサービスに関するお問い合わせは下記まで：

ATLeisure, LLC

カスタマーサービスはメール (customerservice@atleisure.com) またはチャット
(<https://help.atleisure.com>) にて、月曜日から金曜日の午前8時～午後5時
(東部標準時)に対応いたします。

本製品は、家庭での屋外用のみを目的としています。業務用での使用は意図されていません。



設計：米国

⓵

内容物


準備.....	10
組み立てに必要な工具(未付属)	11
金具部品とパッケージの内容	11
組み立て手順	12-13
操作手順	13-14
お手入れとメンテナンス	15
警告と注意事項	15
保証	16
保証請求の手続き	16

パッケージの内容物

商品を組み立てる前に、アンブレラを完全に点検し、すべての金具部品が揃っていることを確認してください。すべての金具の内容物を清潔で平らな場所に並べます。部品を以下のパッケージ内容リストおよび図と比較してください。破損または欠品している部品がある場合は、(1) アンブレラを組み立てない、(2) ベースに砂や水を入れない、(3) 購入先に返品しないでください。カスタマーサービスは電子メール (customerservice@atleisure.com) またはチャット (<https://help.atleisure.com>、月曜日～金曜日、午前8時～午後5時(東部標準時)) で対応しております。

推定組み立て時間: 40分


組み立てに必要な工具: オープンエンドレンチまたはモンキーレンチ(未付属)

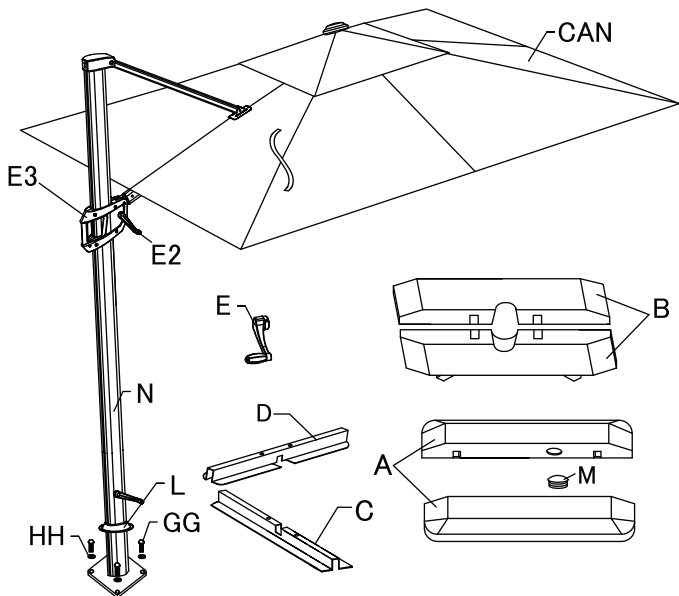

組み立てに必要な工具(未付属)

画像	説明	数量
	モンキーレンチ	1
	砂袋 (159 kg / 350 lbs)	7

金具部品とパッケージの内容

部品	画像	説明	数量
GG		外六角ボルトM10-1.5x20A2-70	4
HH		平ワッシャー M10A2-70	4

Contenu de l' emballage

部品	説明	数量
A	ブロー成形ベース外側	2
B	ブロー成形ベース内側	2
C	下部クロスレグ	1
CAN	キャンピー(アンブレラフレーム上)	1
D	上部クロスレグ	1
E	360° クランクハンドル	1
E2	キャンピークランクハンドル	1
E3	キャンピーグライドハンドル	1
L	ポールサポートキャップ	1
M	ブロー成形ベースキャップ	4
N	アンブレラフレーム(キャンピー付き)	1

組み立て手順





保護材を取る時にナイフやハサミ等の鋭い道具を使用しないでください。商品に損傷する場合があります。ボルトやワッシャーなどの小さな部品は保護材に包まれている可能性があるので捨てないように注意してください。



注意:アンブレラフレームをポールホルダーに挿入する際は、もう一人補助をつけることをお勧めします。

組み立て手順(続き)

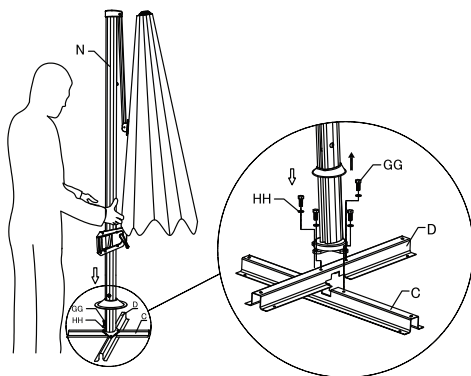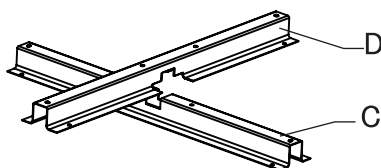


ステップ1: 下部クロスレッグ (C) を地面に置き、ノッチを合わせて、上部クロスレッグ (D) を下部クロスレッグ (C) の上に置きます。


ステップ2: プリスターパックに入っているボルト (GG) とワッシャー (HH) を使用して、アンブレラフレーム (N) をクロスレッグに取り付けます。プリスターパックにあるポールサポートキャップ (L) を持ち上げ、アンブレラフレーム下部の穴とクロスレッグ上部の穴 (C、D) の位置を合わせます。穴ごとに1つのワッシャーと1つのボルトを使用します。締めすぎないでください。アンブレラフレームがベースにしっかりと正しく配置されるように調整します。最後に、モンキーレンチまたはオープンエンドレンチ(未付属)でボルトを締めます。



警告: アンブレラを開く前に、マニュアルの指示に従って組み立てを完了してください。ベースの各セクションに砂を入れます。水を加えて砂を濡らし、各セクションの上部まで水を注ぎ続けます。穴をキャップで塞ぎます。安定性を確保するために、少なくとも159kg (350ポンド) の重量をクロスレッグに置くことをお勧めします。そうしないと、重量バランスがくずれてアンブレラが傾き、破損や怪我の原因となります。

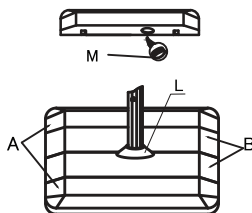


最低159 kg / 350ポンドの砂と水

B 	各Bピースに砂1.5袋を使用し、その後水を上部まで加えます。 68.75 kg / 150ポンド 3袋
A 	各Aピースに砂2袋を使用し、その後水を上部まで加えます。 91 kg / 200ポンド 4袋

*砂袋は含まれていません


ステップ3: 各ベース (A & B) に砂を入れ、キャップ (M) を締めます。図に示すように、各ベースセクションをクロスレッグの上に置き、2つの内側ベースセクションのサポートキャップ (L) を持ち上げます。終了したら、ポールサポートキャップを下にスライドさせて、ブロー成形ベースの上に置きます

組み立て手順(続き)

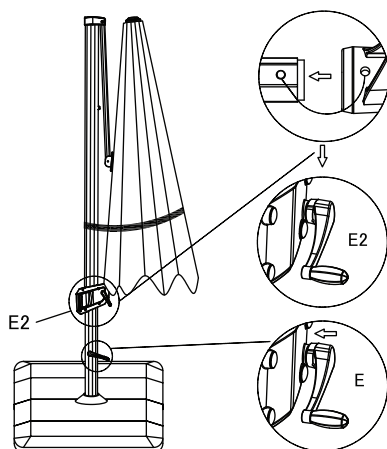


ステップ4: 360° クランクハンドル(E)をポールに取り付け、キャンピークランクハンドル(E2)をキャンピーグライドハンドル(E3)に取り付けます。両方のクランクハンドルのピン穴を対応するピンに合わせてロックします。

操作手順

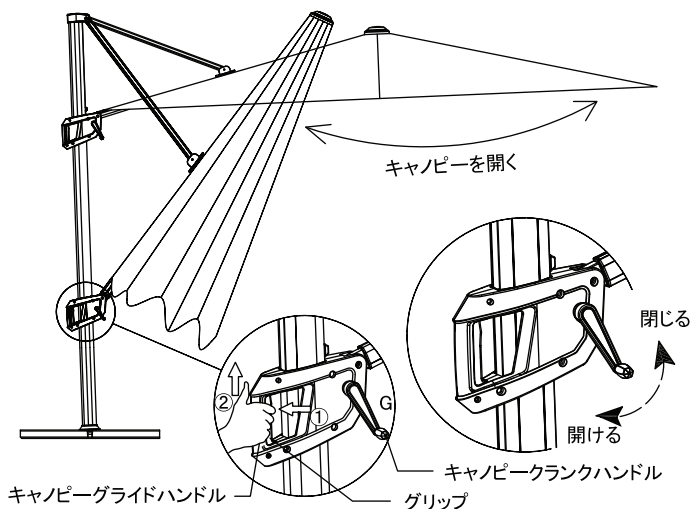


ステップ1: キャンピーとポールの周りの収納ストラップを外します。

ステップ2: アンブレラを開くには、キャンピーグライドハンドル(E3)のグリップを握り、ポールを上下にスライドさせて希望のキャンピー角度にします。グリップを離すと、アンブレラのキャンピーフレームが所定の位置にロックされます。キャンピーを開くには、キャンピークランクハンドル(E2)を時計回りに回し、キャンピーが完全に開くまで回します。

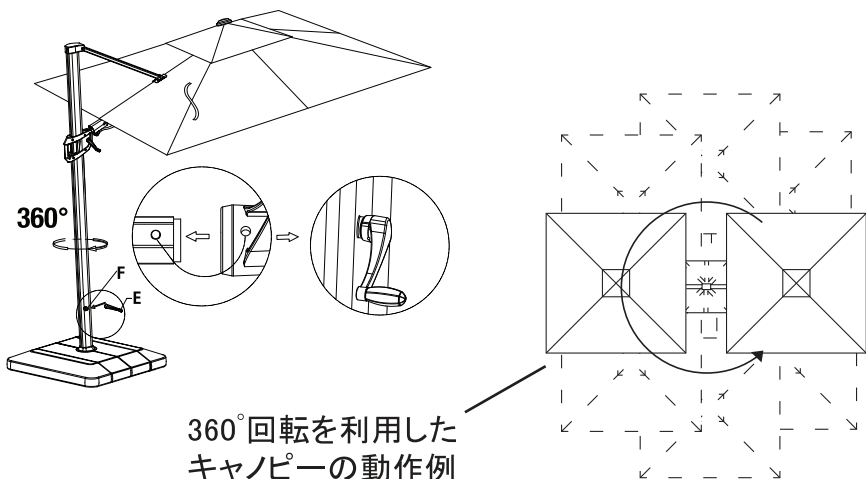

ステップ3: キャンピー付きのアムブレラフレームは 360° 回転させることができます。アムブレラを回転させるには、ポール(F)の下部にある360° クランクハンドル(E)をどちらかの方向に希望の角度まで回します。

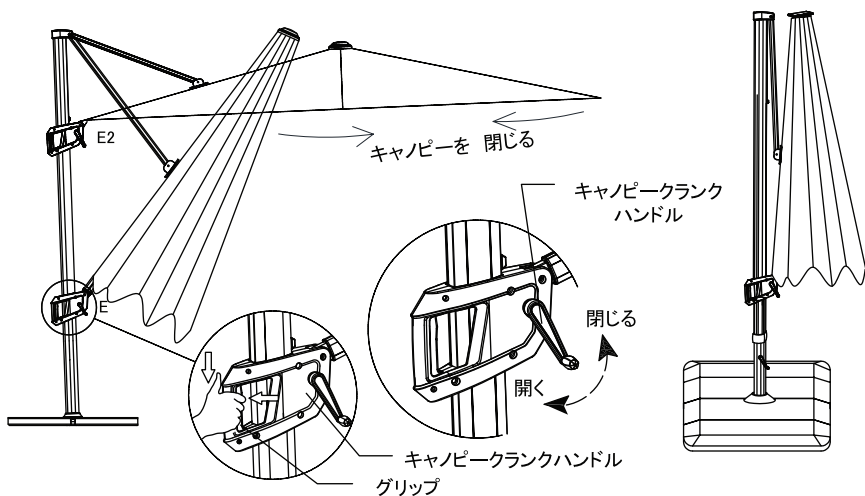

ステップ4: アムブレラを閉じるには、キャンピーが完全に閉じるまで、キャンピークランクハンドル(E2)を反時計回りに回します。キャンピーグライドハンドル(E3)のグリップを握り、ポールの下にスライドさせます。グリップを離して所定の位置にロックします。キャンピーフレームは垂直に立ててください。キャンピーとポールの周りに収納ストラップ

お手入れとメンテナンス

アンブレラキャノピーの外縁にある内側の縫い目に縫い付けられている同封の Sunbrella®お手入れおよびクリーニングラベルをご覧ください。

注意事項



危険: 組み立て中は、お子様が組み立てエリアに入らないようにしてください。



警告: 始める前にすべての指示を読み、概説されている手順に従ってください。指示に従って組み立ておよび設置を行わないと、アンブレラが転倒して怪我や物的損害を引き起こす可能性があります。



警告: 風の強い状況でアンブレラを開かないでください。アンブレラが飛ばされて怪我や損傷を引き起こすおそれがあります。アンブレラをしっかりと固定するには、デッキやパティオに直接ボルトで固定するか、適切な重さのアンブレラベースを使用してください。破損を防ぐため、風の強い状況のときはアンブレラをガラス製のテーブルトップから遠ざけてください。放置、乱暴な使用、悪天候による破損は保証対象外です。



注意: アンブレラの組み立てと使用は、平らな場所で行ってください。



注意: 充填する前に、ベースを使用したい場所に置きます。ベースがいっぱいになると、移動が難しくなります。



重要: 少なくとも90日ごとにボルトの締め具合を確認してください。



情報: アンブレラのベースをしっかりと固定するか、重みをかけてください。



情報: アンブレラを使用しないときは、アンブレラを閉じてキャノピー収納ストラップを使用してください。アンブレラをオフシーズンに箱に入れて保管する場合は、損傷を防ぐため、ソーラーパネルとバッテリーパックを取り外す必要があります。



情報: 本マニュアルに記載されている図式は、組み立てと操作の説明のみを目的としています。アンブレラの実際の外観とは異なる場合があります。



情報: アンブレラをプールの上または近くに置くと、特に濃い色の場合、早期に色あせし、保証の対象外となります。交換用キャノピーを購入するには、カスタマーサービスにお問い合わせください。



情報: 雨風からアンブレラを保護するために、カバー（未付属）を使用することをお勧めします。

米国特許第8,104,492号

品質保証

この製品は、素材および製造上の欠陥に対し、購入日から2年間のメーカー保証の適用対象です。この保証は、不注意、乱用、または天候による損傷は対象外です。保証に関する全開示事項については、customerservice@at-leisure.com 宛てにEメールを送信するか、<https://help.atleisure.com>でチャットにてお問い合わせください。

保証適用の対象外

この保証は、以下の事項を対象外とします。自然現象(風、火災、凍結など); 不適切な組み立て、事故、災害、誤用、乱用、または怠慢による損傷、および風雨にさらされたことによる仕上げの変色や色あせ。本製品は業務使用を目的としていません。本保証はお客様に特定の権利を付与するものであり、お客様は州によって異なるその他の権利を有する場合があります。

クレームの申請

保証期間内であれば、レシートと破損した傘の写真を送付して、ATLeisure宛てにクレームを申請することができます。

Eメール:customerservice@atleisure.com またはチャットでのお問い合わせは
<https://help.atleisure.com> まで。米国東部標準時間 午前8時～午後5時(月曜日～金曜日)

Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

Costco Wholesale Canada Ltd.*
415 W. Hunt Club Road
Ottawa, Ontario
K2E 1G5, Canada
1-800-463-3783
www.costco.ca
* faisant affaire au Québec sous
le nom les Entrepôts Costco

Importado por:
Importadora Primex S.A. de C.V.
Bvd. Magnocentro No. 4
San Fernando La Herradura
Huixquilucan, Estado de México
C.P. 52765
RFC: IPR-930907-S70
(55)-5246-5500
www.costco.com.mx

Costco Wholesale Australia Pty Ltd
17-21 Parramatta Road
Lidcombe NSW 2141
Australia
www.costco.com.au

Costco Wholesale UK Ltd /
Costco Online UK Ltd
Hartspring Lane
Watford, Herts
WD25 8JS
United Kingdom
01923 213113
www.costco.co.uk

Costco Wholesale Spain S.L.U.
Polígono Empresarial Los Gavilanes
C/ Agustín de Betancourt, 17
28906 Getafe (Madrid) España
NIF: B86509460
900 111 155
www.costco.es

Costco Wholesale Iceland ehf.
Kauptún 3-7, 210 Gardabaer
Iceland
www.costco.is

Costco France
1 avenue de Bréhat
91140 Villebon-sur-Yvette
France
01 80 45 01 10
www.costco.fr

Costco Wholesale Japan Ltd.
2 Kakuchi, 2 Gaiku, Kaneda-Nishi
361 Urakura, Kisarazu shi
Chiba, 292-0007 Japan
0570-200-800
www.costco.co.jp

Costco Wholesale Korea, Ltd.
40, Iljik-ro
Gwangmyeong-si
Gyeonggi-do, 14347, Korea
1899-9900
www.costco.co.kr

Costco Wholesale New Zealand Limited
2 Gunton Drive
Westgate
Auckland 0814
New Zealand
www.costco.co.nz

Costco (China) Investment Co., Ltd.
Room 01 Mezzanine
No. 5178, Kang Xin Highway
Pudong New District
Shanghai
China 201315
+86-21-6257-7065

Costco Wholesale Sweden AB
Box 614
114 11 Stockholm
Sweden
www.costco.se



www.atleisure.com

米国ジョージア州アトランタ

カスタマーサービスは、Eメール:

customerservice@atleisure.com または

チャット: <https://help.atleisure.com> にて受付可能。

午前8時～午後5時(米国東部標準時間)月曜日～金曜日