

BOLD SERIES GARAGE IN A BOX - 4 PIECE SET

INSTALLATION GUIDE



WARNING: Excessive weight hazard!

Use two or more people to move, assemble, or install cabinets and locker to avoid back injury. Do not leave children unattended near cabinets. High risk of tipping if cabinets are installed incorrectly: securely attach cabinets to the wall to avoid serious injury.



ATTENTION:



Is your cabinet damaged?
If you have any questions, please contact your dealer.

Index


Unpacking	3
Tools Needed	3
Parts Supplied	4
Spare Part	5
Worktops, Weight Capacity	6
Installing the Feet	7
Mounting Locker to the Drywall	8
Fastening Wall cabinet to the Locker	9
Mounting Wall Cabinet to the Drywall	10
Attaching Light Valance to Wall Cabinet	11
Installing the Workbench	12
Installing the Workbench to the Locker	13
Installing the Drawers	14
Installing the Workbench to the Wall	15
Installing the Workbench Shelf	16
Inserting Shelves and Closet Rod	17
Utility Access	18

Unpacking


- Begin by placing the package on a covered flat surface.
- Remove all cardboard, foam packaging material and clear plastic bags.
- Dispose / recycle all packaging materials.
- Verify all the contents in the box and gather the required tools. See "Parts" and "Tools Needed" in the list below.

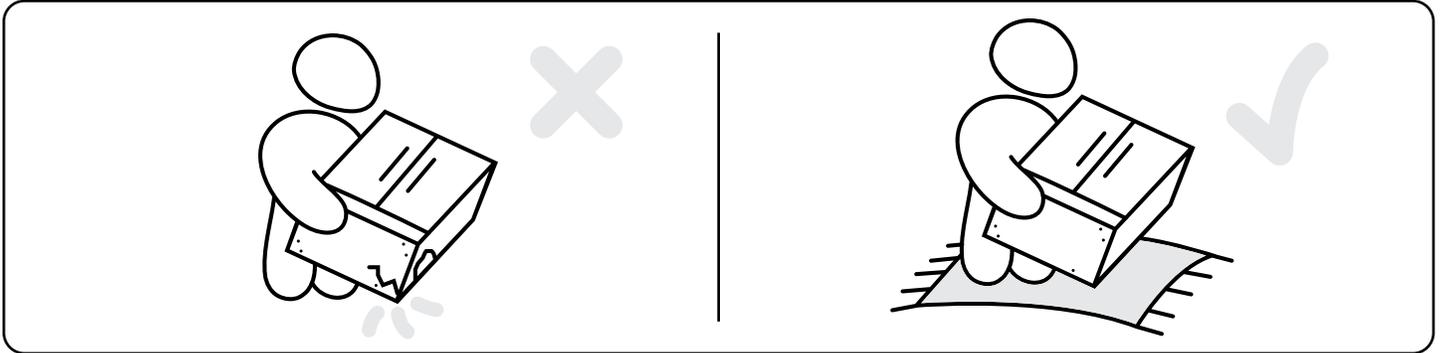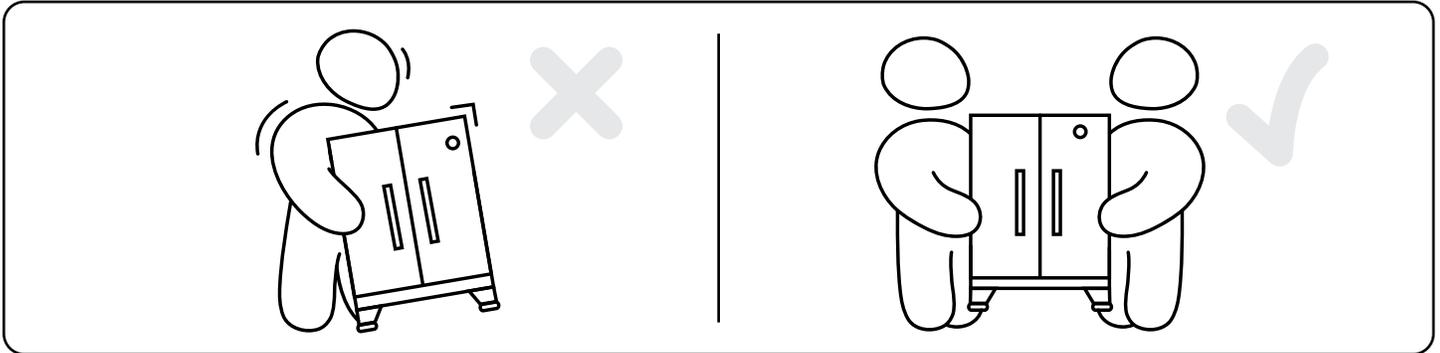

Tools Needed



1 x Adjustable wrench



1 x 12" Magnetic Leveler



1 x Stud Finder



1 x Tape Measure




1 x 7/16" Socket driver wrench


1 x 8mm" Socket driver wrench




1 x 7/16" socket

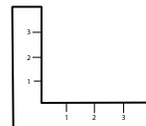

1 x Set Square



1 x Pencil

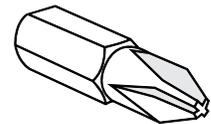

1 x #2 Phillips Bit




1 x #2 Phillips head screw driver

1 x #3 Phillips head screw driver



1 x Cordless Power Drill

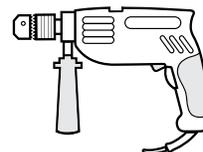

1 x Hammer Drill




1 x Masonry Bit

[optional for masonry]

Parts Supplied

Type	Hardware	Locker	Wall	Workbench
Hardware Pack	1/4" ID x 1/2" OD Washer	22	4	4
	1/4" Lock Nut	8	4	4
	1/4" x 0.9" Fender Washer	4	4	2
	1/4" x 2.5" Wall Screw	4	4	2
	1/4"-20 x 5/8" Hex Bolts	10	4	4
	Foot Attachment Screws	17	0	0
	Keys	2	2	0
	Light Valence Bolts	0	3	0
	Light Valence Nuts	0	3	0
Included Components	Plastic Hole Caps	16	8	0
	Adjustable Leveling Feet	4	0	2
	Rubber Grommet	1	0	0
	Essentials Rubber Grommet	0	0	2
	Adjustable Shelves	3	0	0
	Cabinet Leg	4	0	0
	Closet Rod	1	0	0
	EVA Foam Drawer Liners	0	0	2
Light Valence	0	1	0	

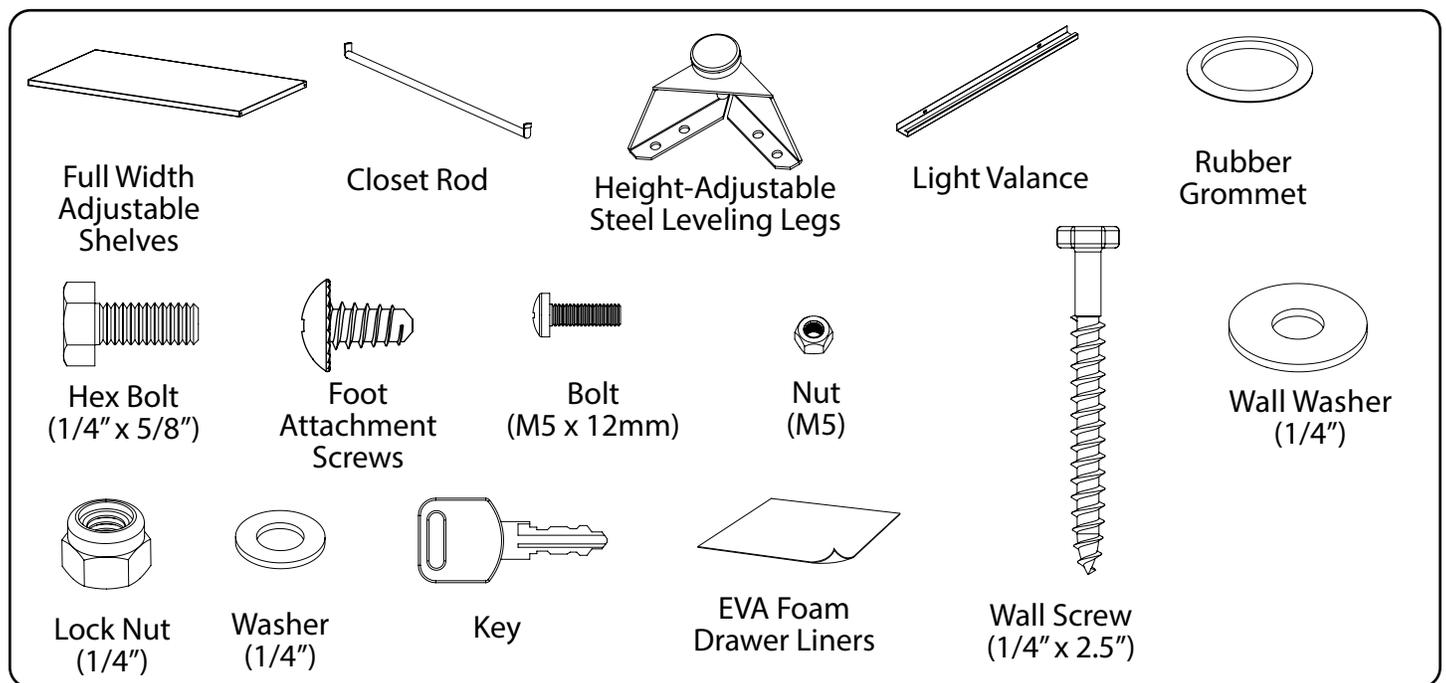


Spare Parts

S. No	Part Number	Description	BOM QTY	Spare Parts SKU	Spare Parts Qty
1	PB3-281.002A-01-XX H00165A-01	60in Essential Single Wall Door	1	74000 - Red 74001 - Black 74002 - Platinum 74003 - Grey	1
2	PB3-287A-01-XX PB3-287.002A-01-XX H00691A-01 H00110A-01	60in Worktop Shelf	1	74004 - Black 74005 - White	1
3	PB3-285.002A-01	60in Worktop Drawer	2	74006 - Red 74007 - Black 74008 - Platinum 74009 - Grey	1
4	H00850A-01	Essential Rubber Grommet	2	74010	1
5	PB3-293A-01 H00691A-01 H00110A-01	Essential Workbench Leg	(Pack Of 2)	74011 - Black 74012 - White	(Pack Of 2)
6	H00864A-01	3in Gas Spring For Door	2	74013	1
7	PB3-05.003A-01-XX PB3-05.004A-01-XX H00165A-01	Bold 3.0 - 30" Locker Doors	(Pack Of 2)	49031 - Black 50031 - Grey 50229 - Red 56759 - Platinum	(Pack Of 2)
8	PB3-05.005A-01-XX	Bold 3.0 - 30" Closet Rod	1	50033 - Black 56760 - White	1
9	PB3-05.002A-01-XX	Bold 3.0 - 30" Locker Shelves	(Pack Of 2)	50032 - Black 56761 - White	(Pack Of 2)
10	H00051A-01	Rubber Powercord Grommet	1	50982 - Black	1
11	PB3-16.005.01A-01-XX H00088A-01	Bold 3.0 Feet with Hardware	(Pack Of 4)	50971 - Black 50981 - White	(Pack Of 4)
12	H00090A-01 H00165A-01	Locker Lock (Cylinder and Key)	1	50976	1
13	H00084A-01	Threaded Leveling Legs	(Pack Of 4)	50972	(Pack Of 4)
14	PB3-14.003.04A-01 PB3-14.003.05A-01	Plastic Extrusion End Cap	(Pack Of 2)	50973	(Pack Of 2)
15	H00056A-01	Plastic Bushing for Spring Pin Hinges	(Pack Of 4)	50238	(Pack Of 4)
16	H00047A-01	Spring Pin Hinges	(Pack Of 4)	50995	(Pack Of 4)
17	H00041A-01	Lag Screw - 0.25in x 2.5in	10	54038	1
18	H00042A-01	Fender Washer- 0.25in x 0.875in	10	54039	1
19	H00043A-01	Hex Bolt - 0.25-20x0.625in	18	54040	1
20	H00044A-01	Washer - 0.25ID x .75OD	30	54041	1


Spare Parts

21	H00055A-01	Lock Nut - 0.25 Inch	16	54042	1
22	H00169A-01	Wood Screw(#8 x 5-8in)		54043	1
23	H00071A-01	GB818-M5x12	3	54046	1
24	H00072A-01	M5 Nut	3	54047	1
25	PB3-281.003A-01-XX H00071A-01 H00072A-01	60in Essential - Wall Light Valance with Hardware	1 Set	74014 - Black 74015 - White	1 Set
26	PB3-313.001A-01	Bold series 60in. Essential Rubberwood worktop	1	37510	1

Worktop




Weight Capacity

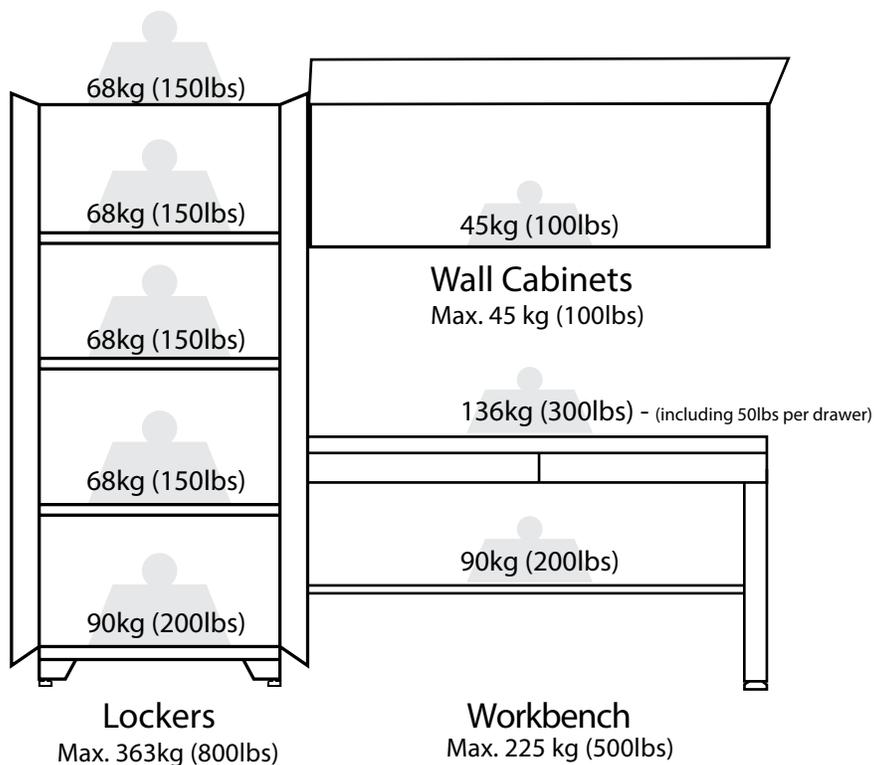


Installing the Feet


i Parts Needed.

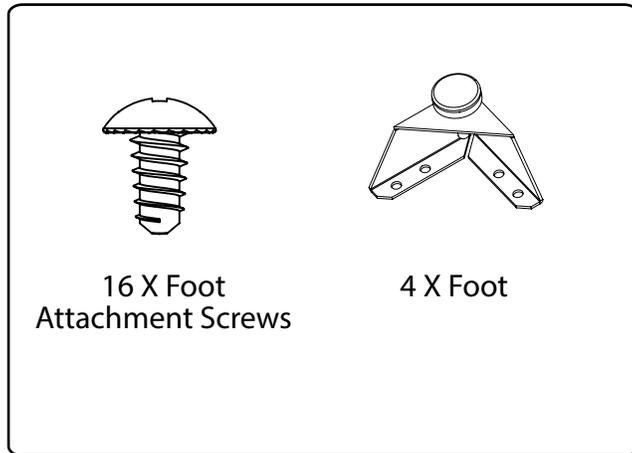


1 Remove any shelves or loose items. Lay cabinet on its back.

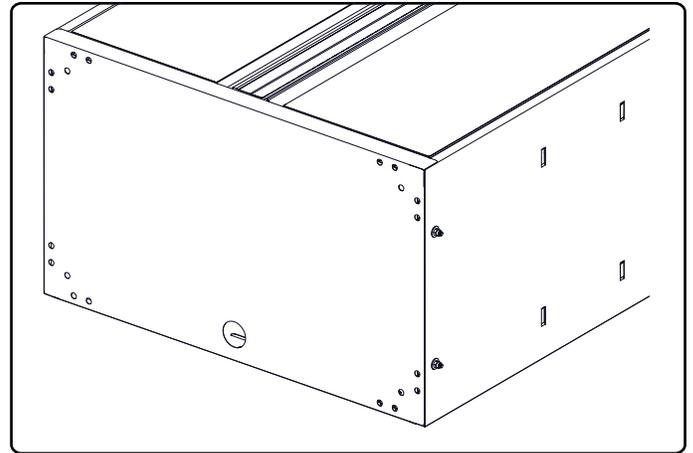


2 Install all 4 levelling legs into the feet.

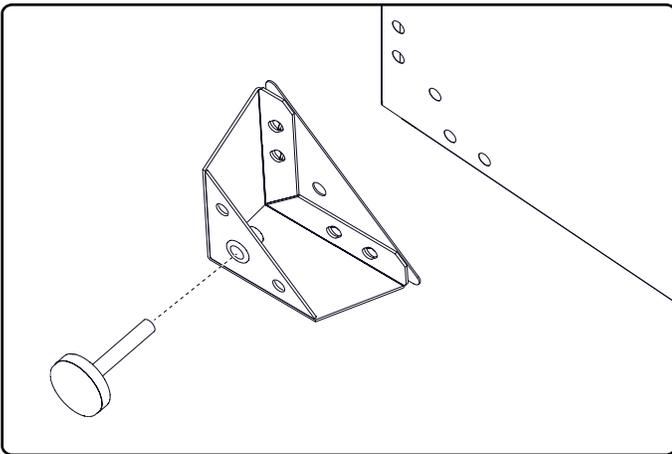


3 Align foot with edge of cabinet. Screw in 4 x foot attachment screws using #3 philips screwdriver.

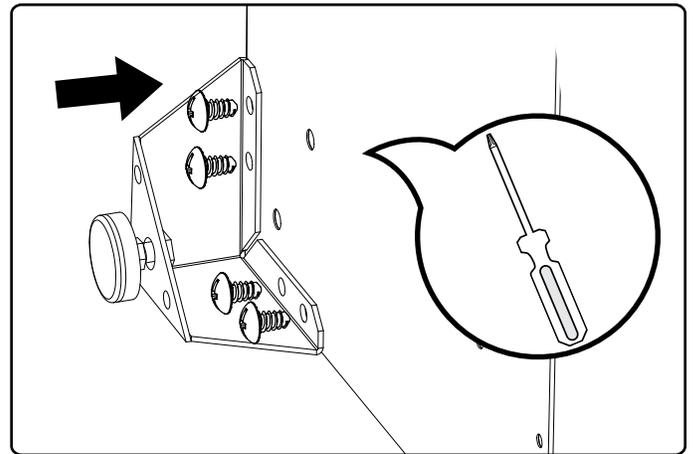

4 Repeat step 3 for each corner.

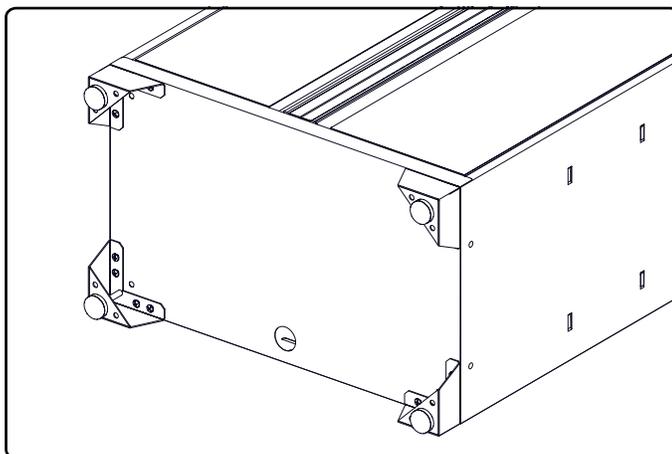


5 Stand & level cabinet.

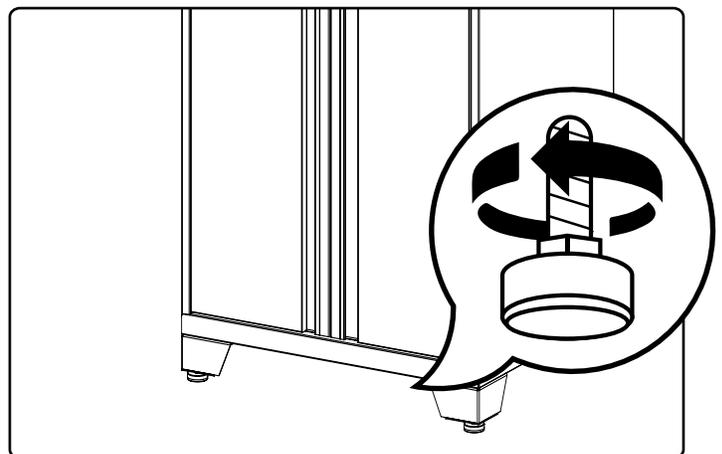


Mounting Locker to the Wall Stud


i Parts Required

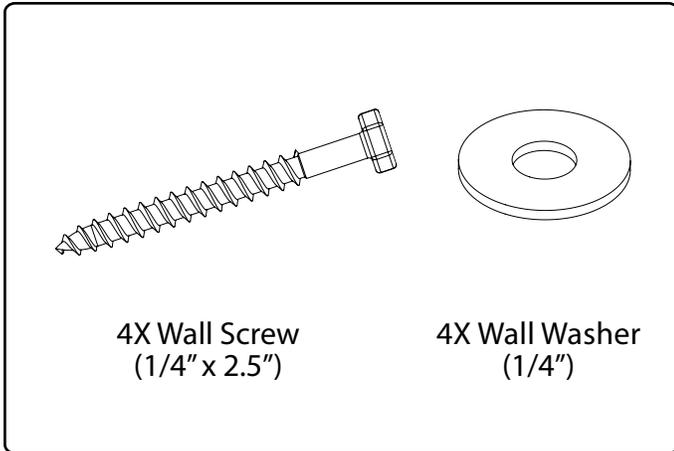


1 Use stud finder to locate the studs and mark the wall with a pencil.

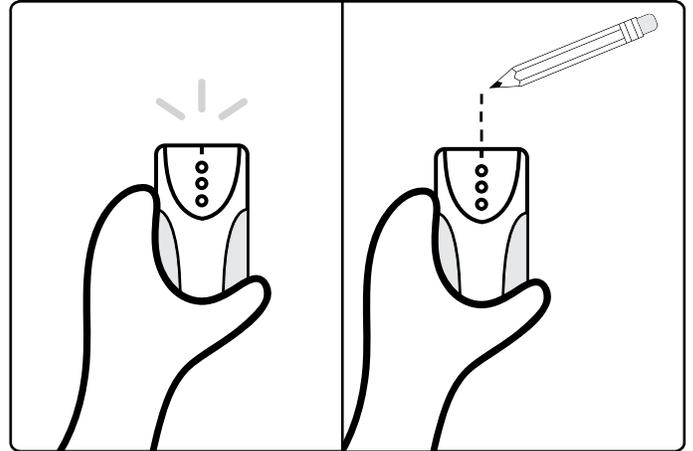


2 Place cabinet tight against the wall.

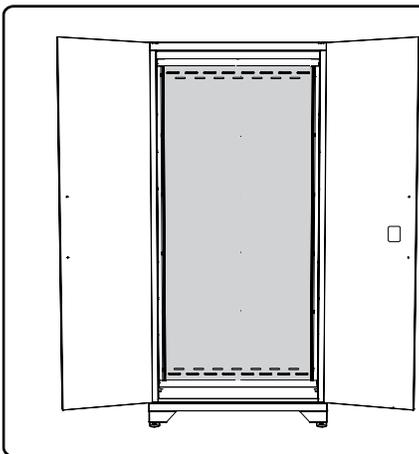


3 Align cabinet to stud marks.

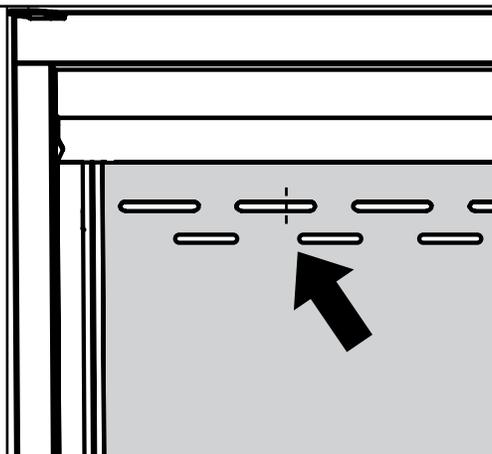

4 Level cabinet by adjusting feet

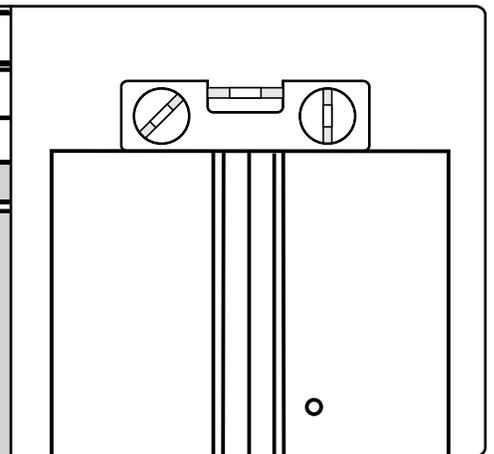

5 Install 4 wall screws and washers through perforated holes into studs.

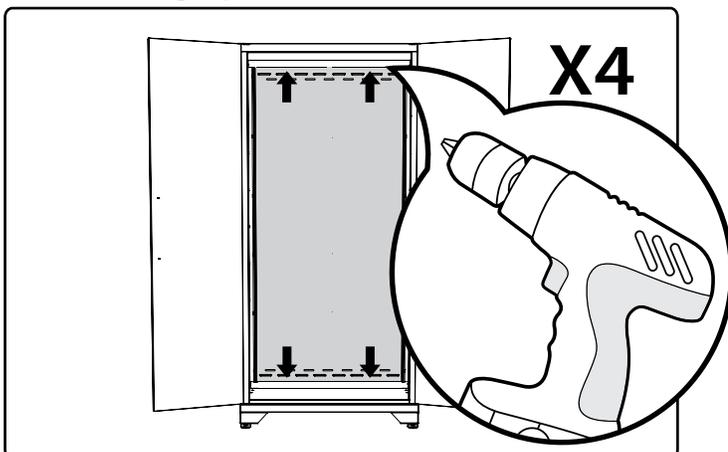


i Masonry.


- Follow steps 2 to 4.
- Drill 4 pilot holes through the perforated holes with hammer drill & masonry bit.
- **Follow Step 5 using:**
- Use 4 x (2 1/4" x 1/4") Tapcon Concrete Anchor into wall. (Not Included)
- **OR** 4 x (#10 x 2") Screw with 3/16" masonry plug into wall. (Not Included)

Installing Wall Cabinet


Parts Required

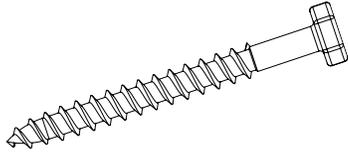


4x Wall Screw
(1/4" x 2.5")



4x Wall Washer
(1/4")



2x Hex Bolt
(1/4" x 5/8")




4x Washer
(1/4")




2x Lock Nut
(1/4")

- 1** Use stud finder to locate the studs and mark the wall with a pencil.

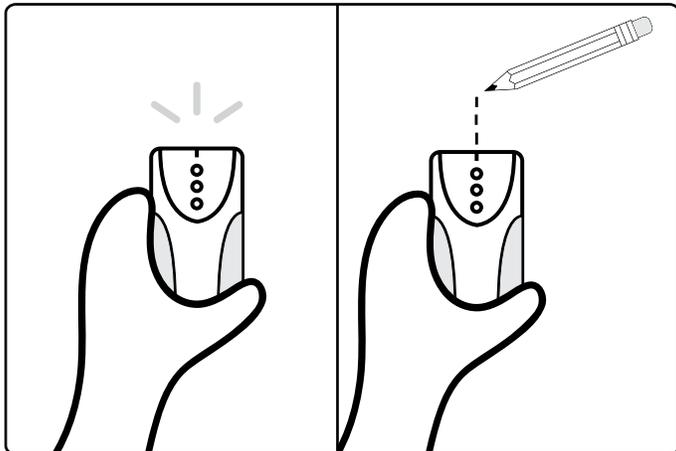


- 2** Fasten the wall cabinet to the locker using the 2x Hex bolt, 2x lock nut, and 4x washer, using the top two connecting holes.

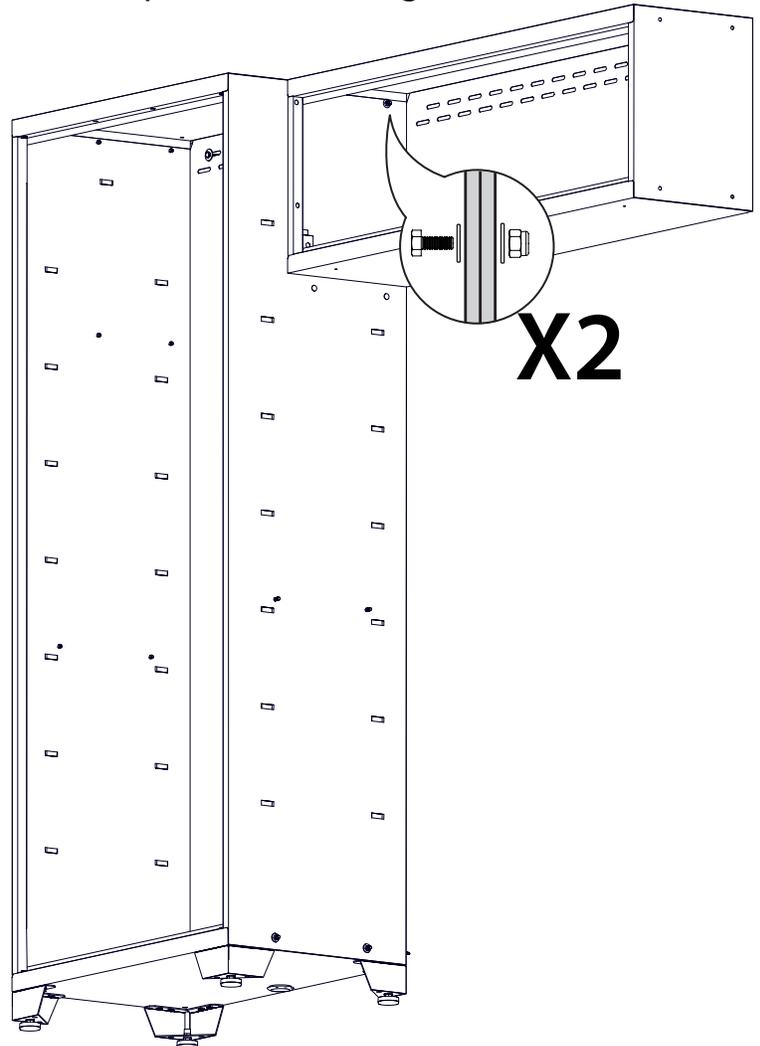


Note: The wall cabinet can be mounted either the left or right side of the locker.

Installing Wall Cabinet


- 3** Align cabinet to stud marks.

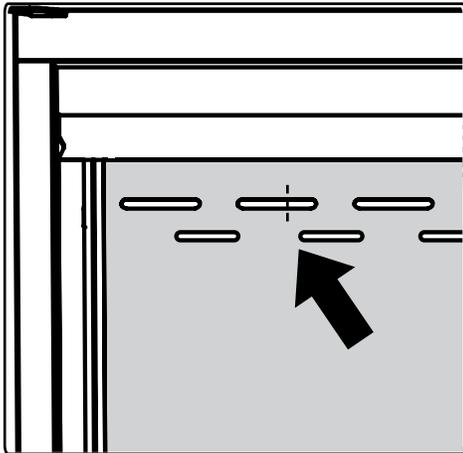

- 4** Level cabinet using a leveller.

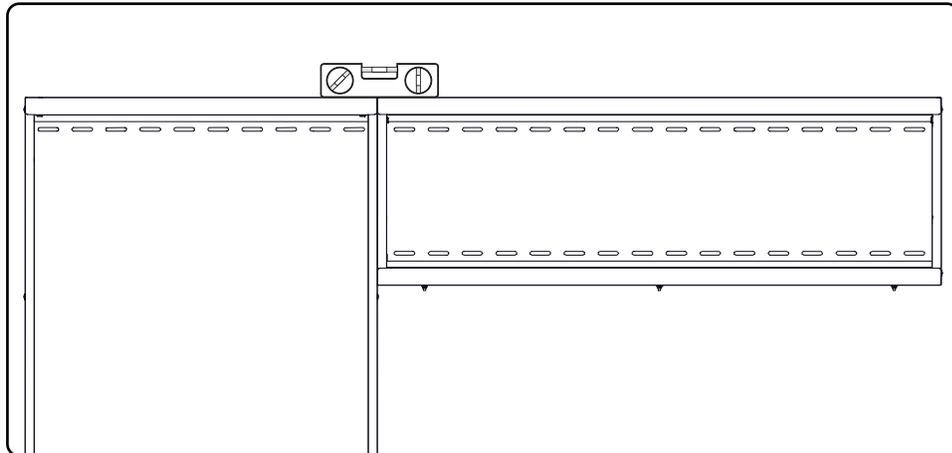

- 5** Install 4x wall screws and washers through perforated holes into studs.

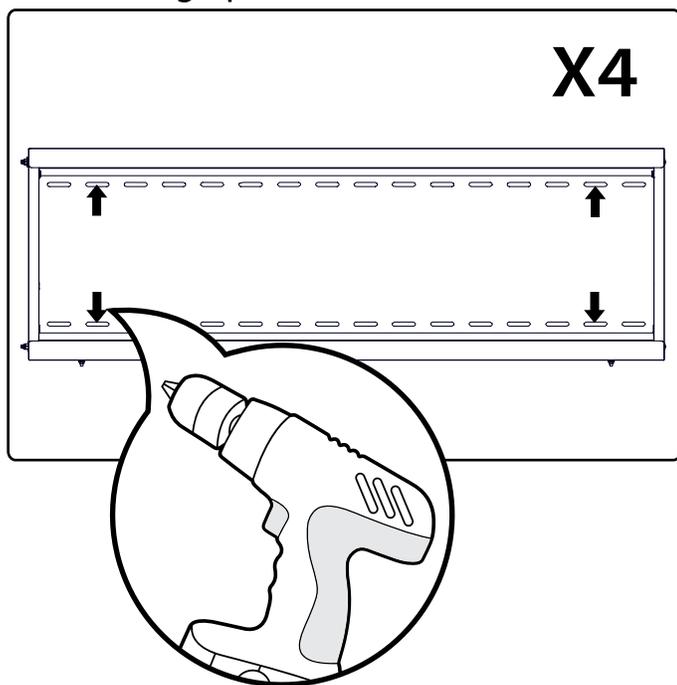


i Masonry.


- Follow steps 3 to 4.
- Drill 4 pilot holes through the perforated holes with hammer drill & masonry bit.
- **Follow Step 3 using:**
- Use 4 x (2 1/4" x 1/4") Tapcon Concrete Anchor into wall. (Not Included)
- **OR** 4 x (#10 x 2") Screw with 3/16" masonry plug into wall. (Not Included)

Attaching Light Valance to Wall Cabinet


i Parts Needed.

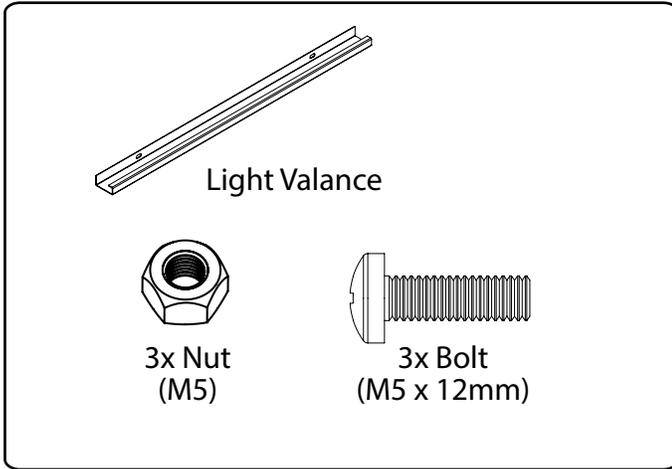



1 Align holes of valance with cabinet.

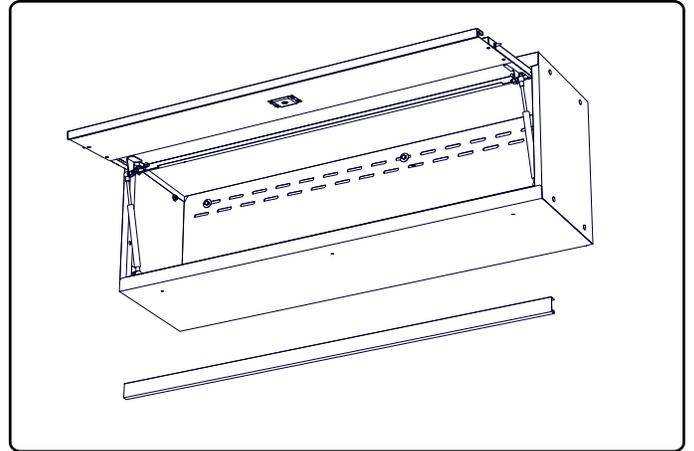

2 Insert and tighten bolt and nuts.

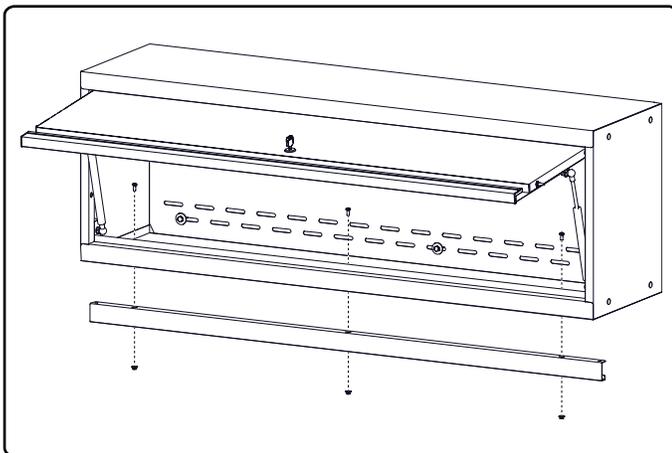

3 Cross Section View

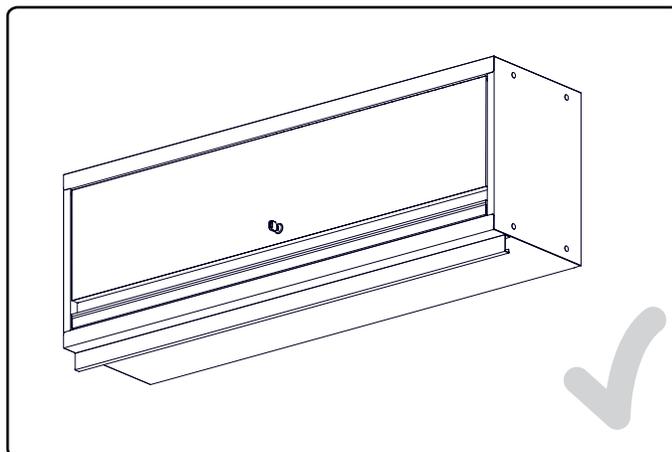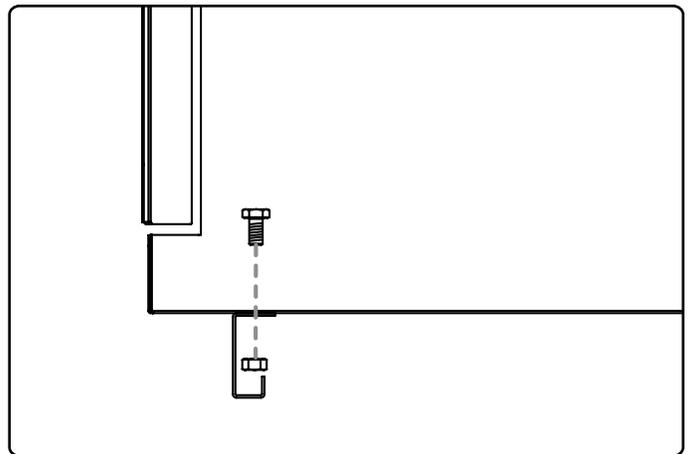


Note:


If installing the PVC backsplash, leave this step for last.

Installing the Workbench


Parts Needed.

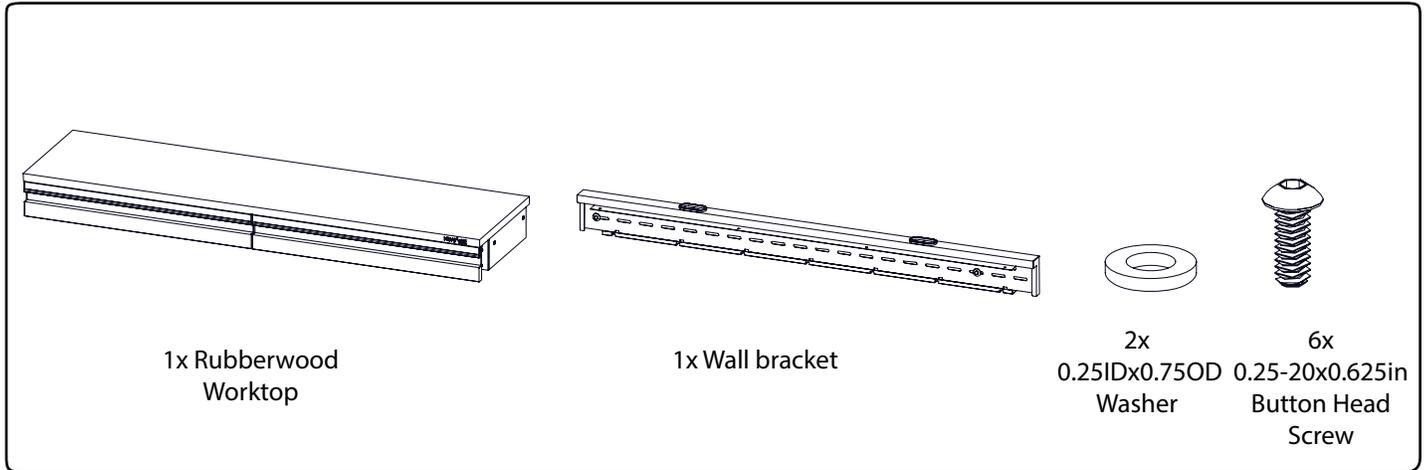



1 Place the pre-installed worktop upside down to install to the wall bracket.

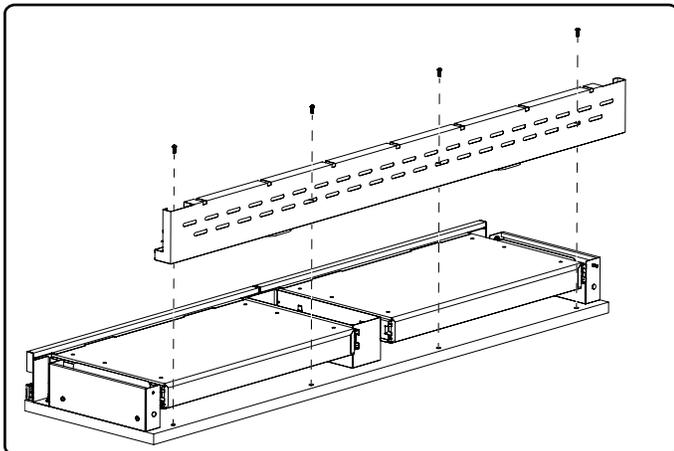

2 Install the legs by locking into the slots provided in the side bracket.

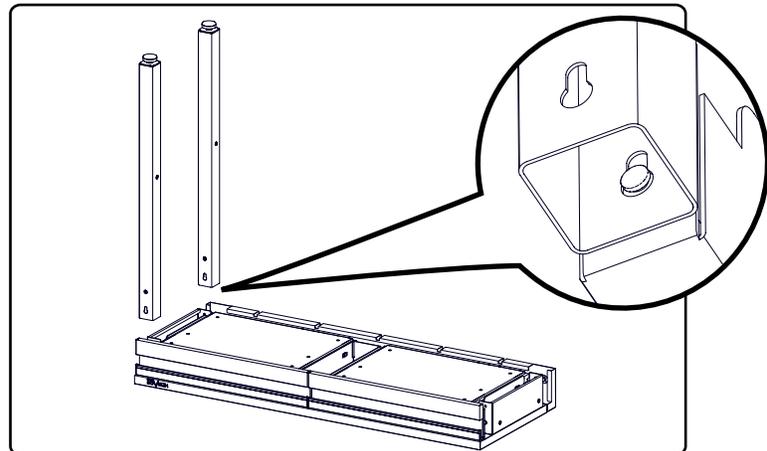


3 Install the legs to the bracket with the screws and washers.

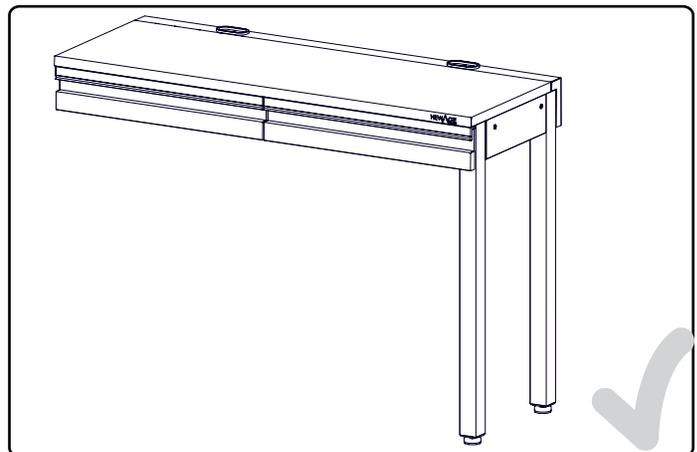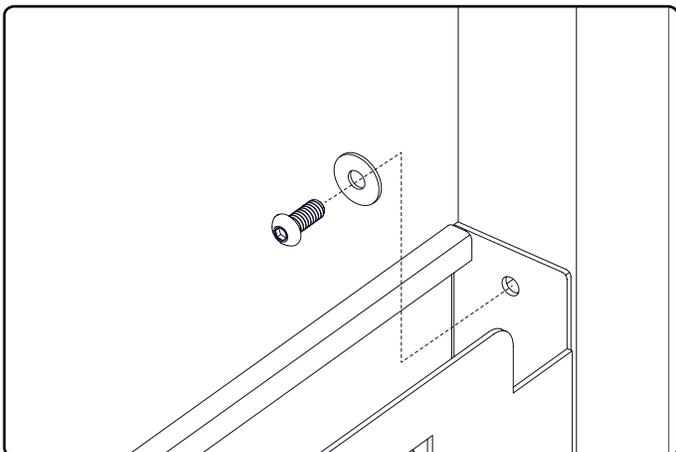


Installing the Workbench to the Locker

- 1 Remove doors by pulling down on spring pin at top and bottom of door panel.



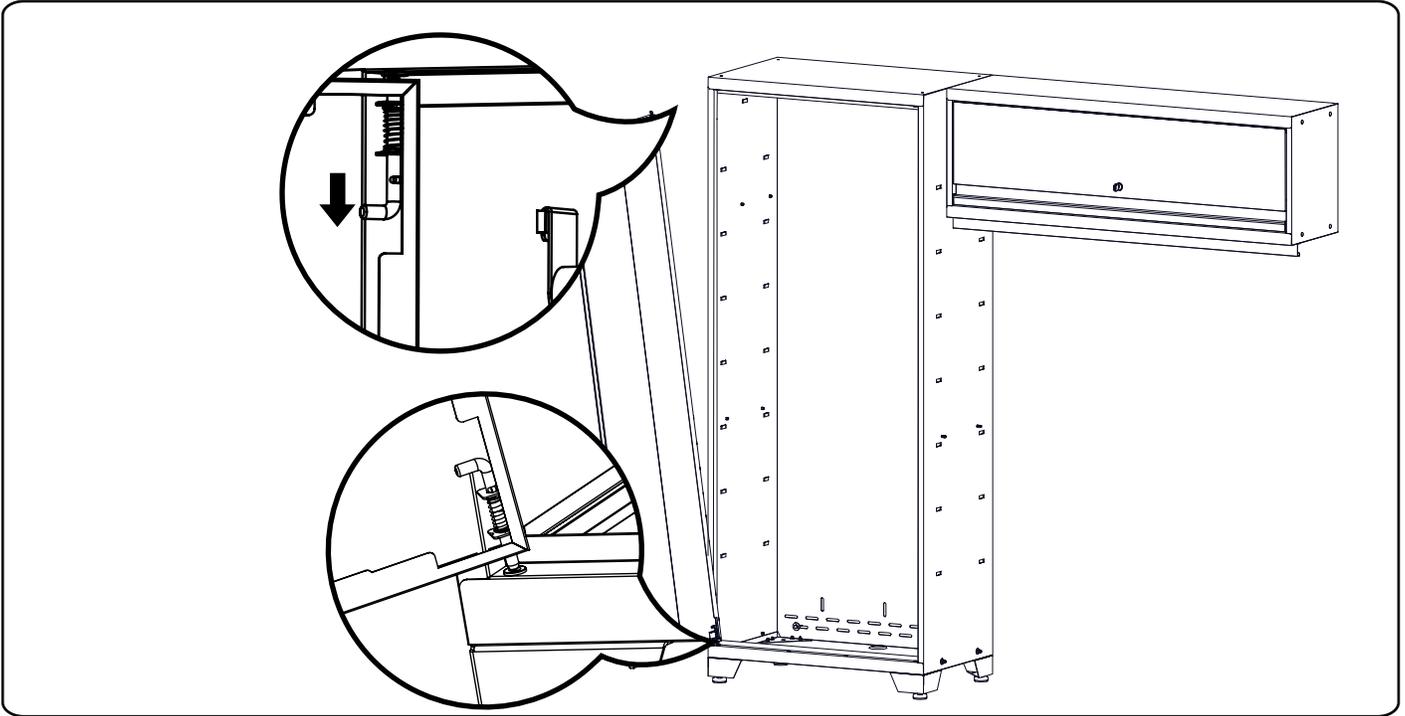


- 2 Tighten the 2x ¼" hex bolts and 2x ¼" washers to install the workbench to the locker.


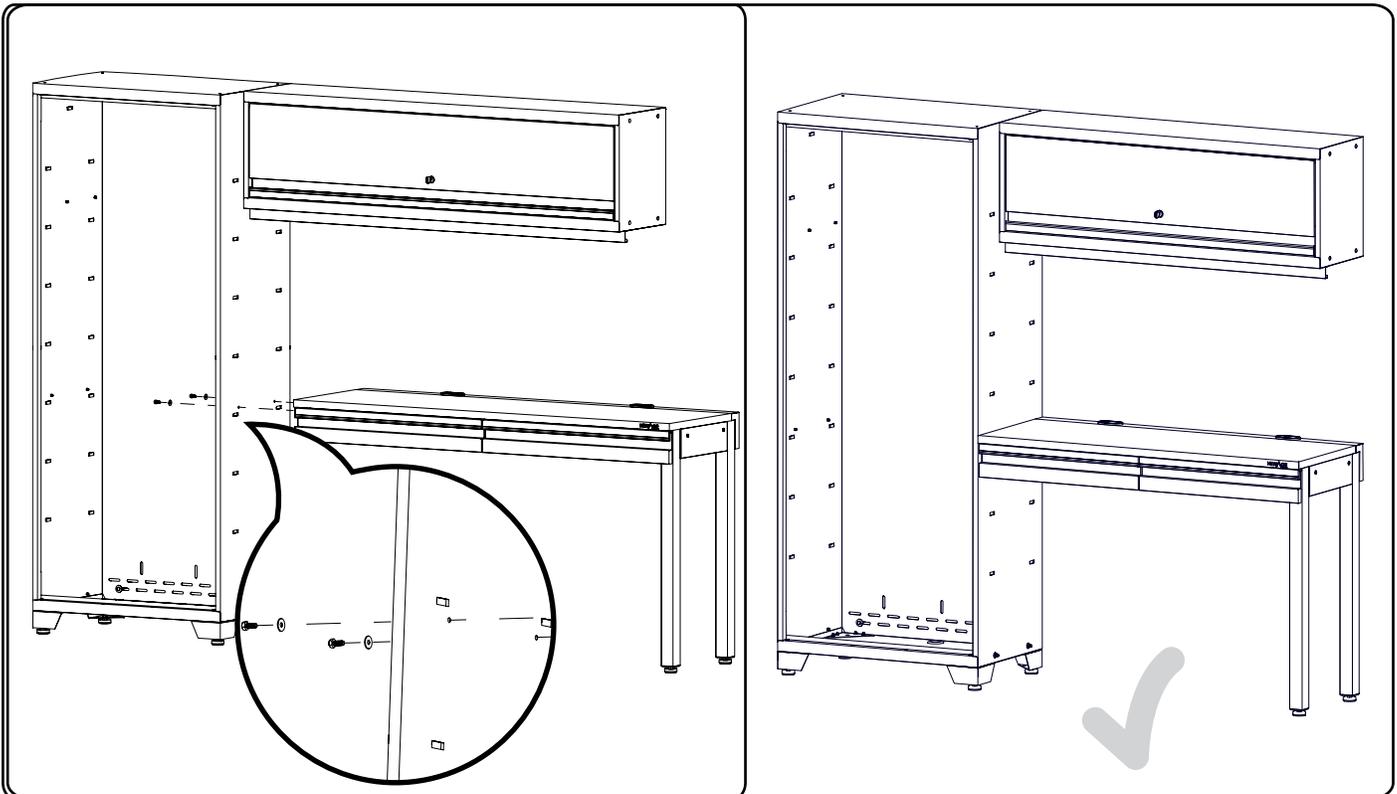


Removing & Installing the Drawers

Removing Drawers.

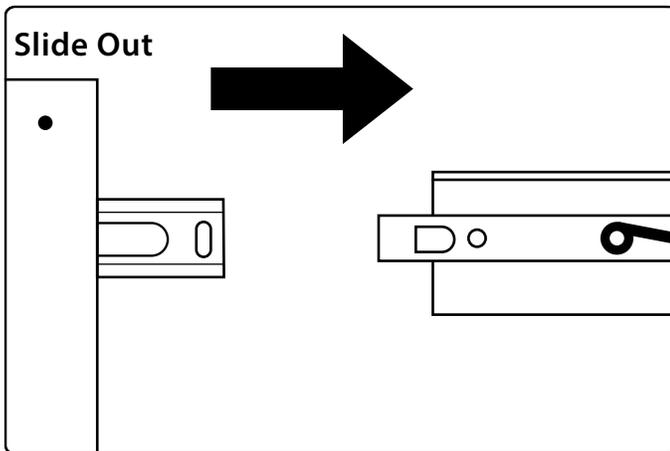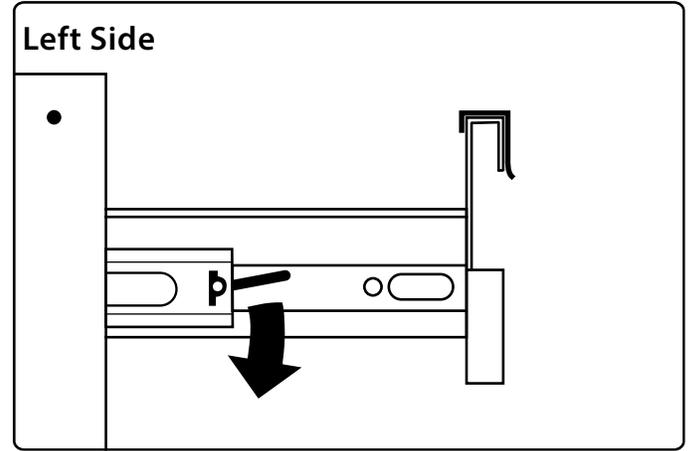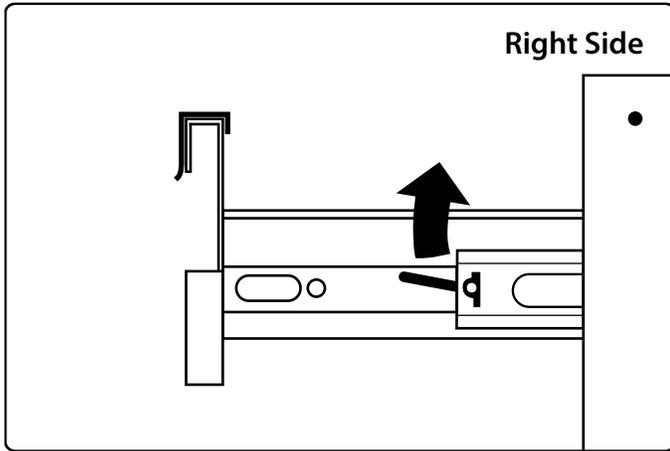


Inserting Drawers.

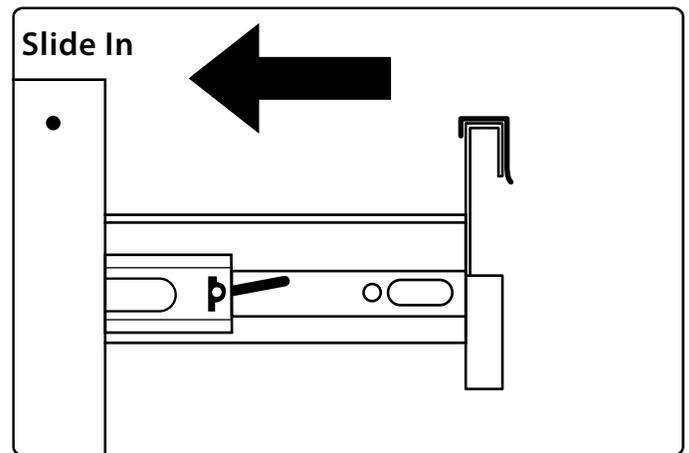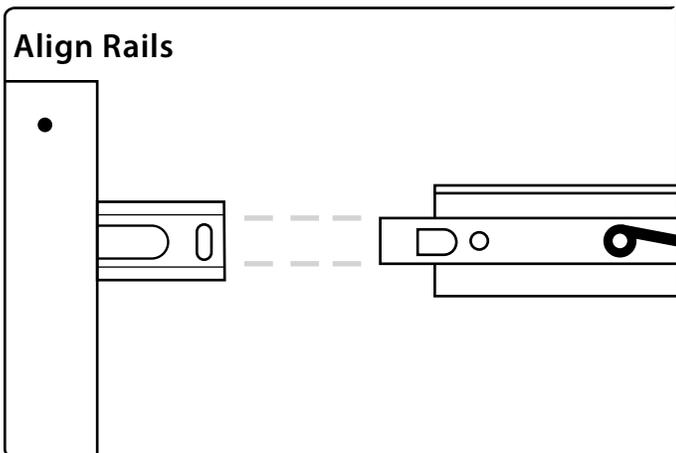


Installing the Workbench to the Wall


- 1** Place workbench tight against the wall.

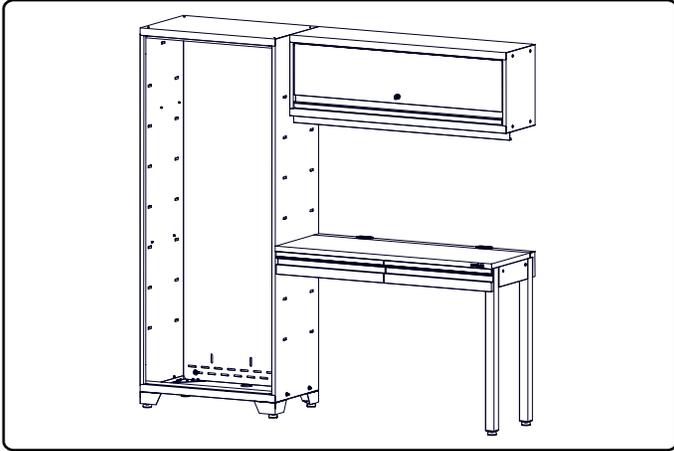


- 2** Remove the drawers from the slides.

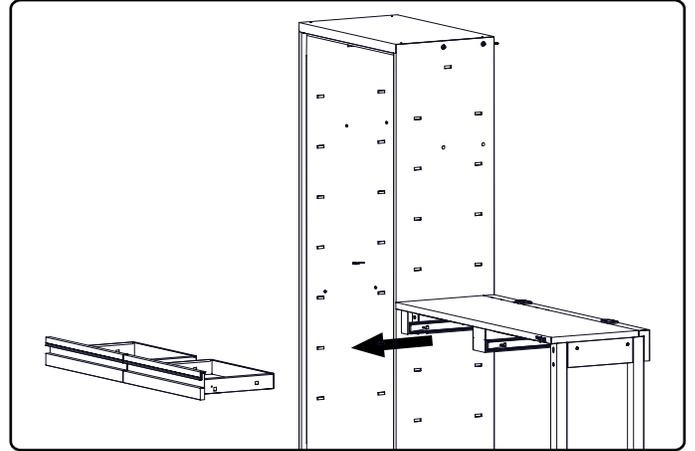


- 3** Align workbench assembly to stud marks.

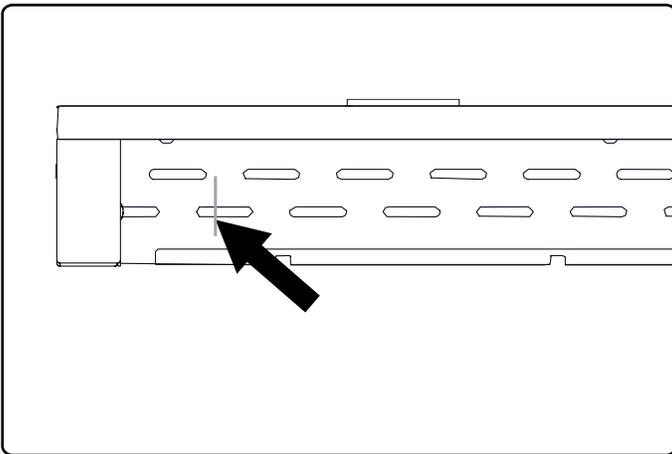

- 4** Level workbench by adjusting feet.

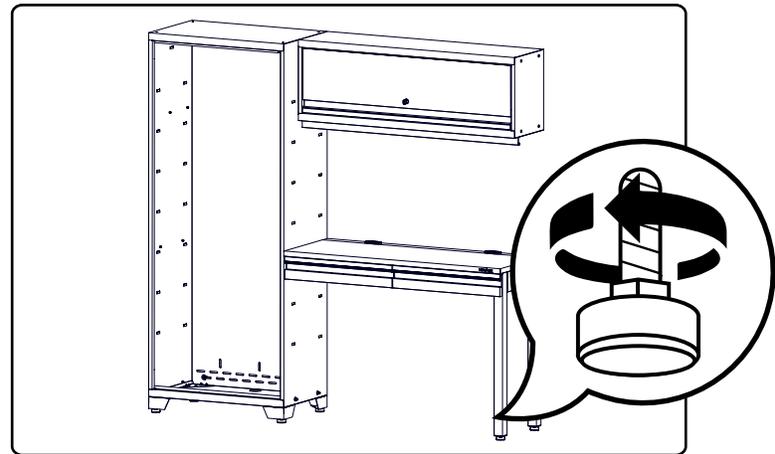

- 5** Install 2x wall screws and 2x washers through perforated holes into studs.

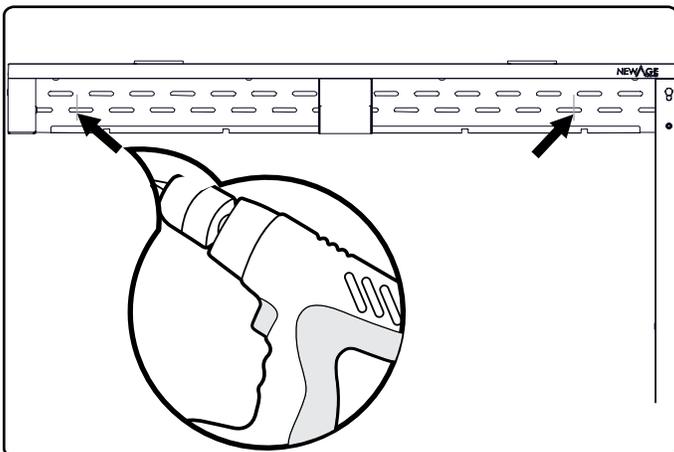


i Masonry.


- Follow steps 3 to 4.
- Drill 2 pilot holes through the perforated strip with hammer drill & masonry bit.
- **Follow Step 5 using:**
- Use 2 x (2 1/4" x 1/4") Tapcon Concrete Anchor into wall. (Not Included)
- **OR** 2 x (#10 x 2") Screw with 3/16" masonry plug into wall. (Not Included)

Installing the Workbench Shelf


i Parts Needed.

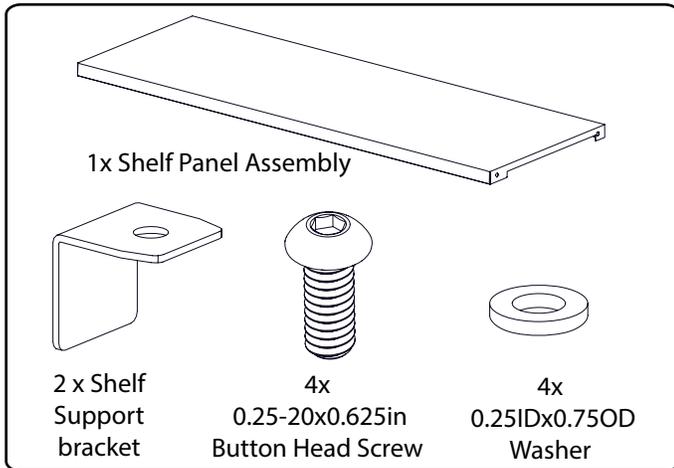


1 Install the shelf support brackets at an angle to the designated position in the locker.

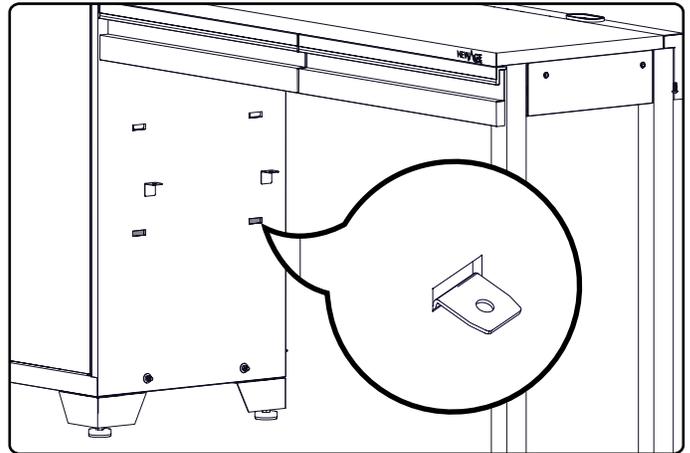



2 Mount the shelf panel assembly to the brackets.

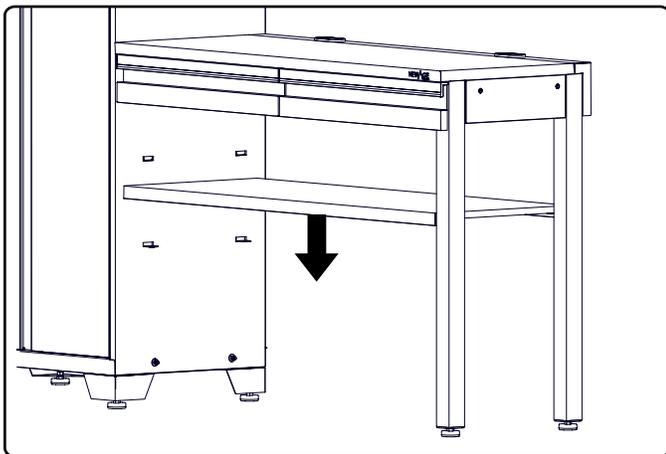

3 Tighten the shelf panel to the shelf support brackets using 2x screws and 2x washers.

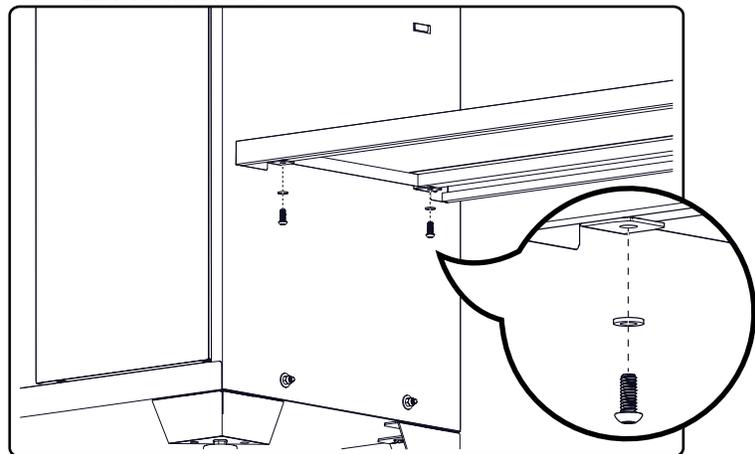


4 Tighten the other side of shelf to the workbench legs using 2x screws and 2x washers.

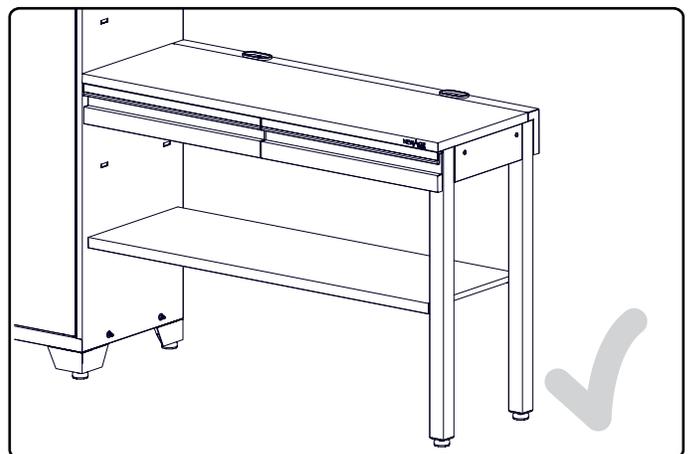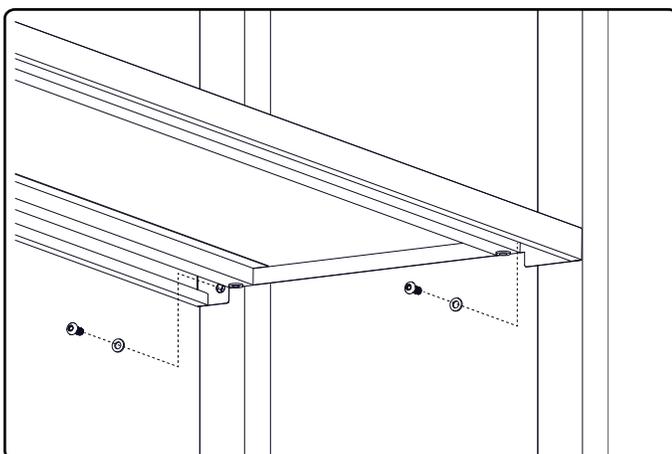


Inserting Shelves and Closet Rod


1 Insert shelf at a slight angle.

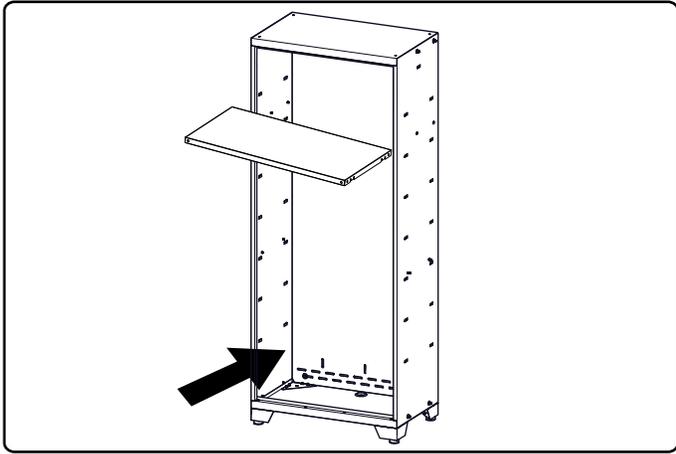


2 Level shelf.

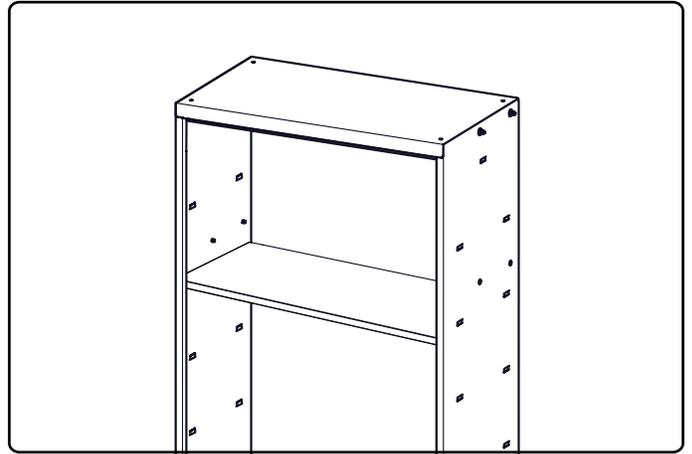


3 Lower shelf onto brackets by sliding tabs into slots.

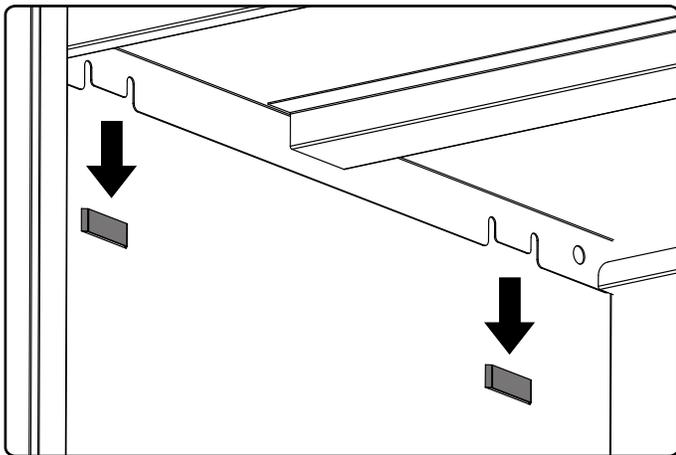


4 Ensure shelf is clipped in position.

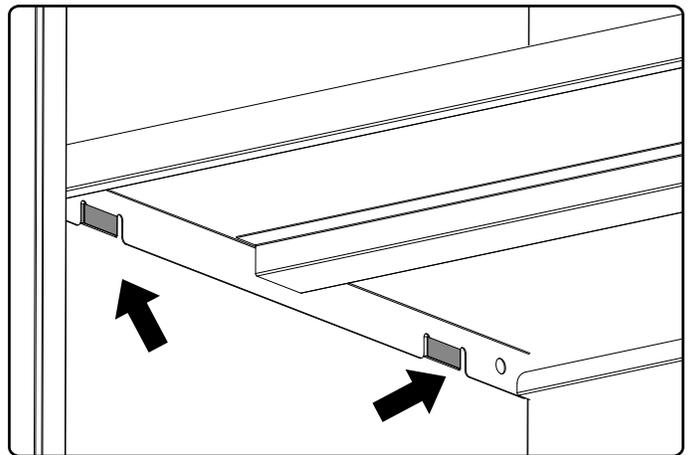


5 Insert remaining shelves.

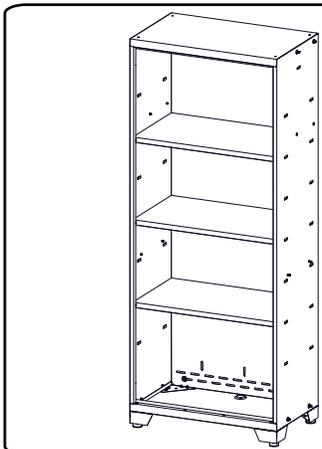

6 Insert Closet Rod on a slight angle into cabinet.

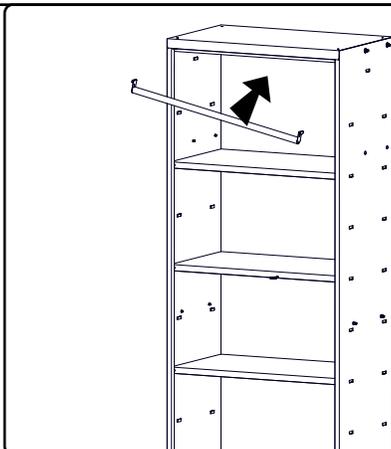


7 Level Rod and slide down into middle slot.

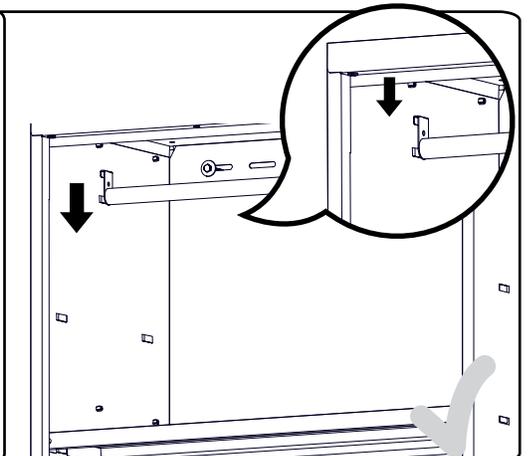



Utility Access

- 1** Insert rubber grommet into cut-out hole in bottom panel.

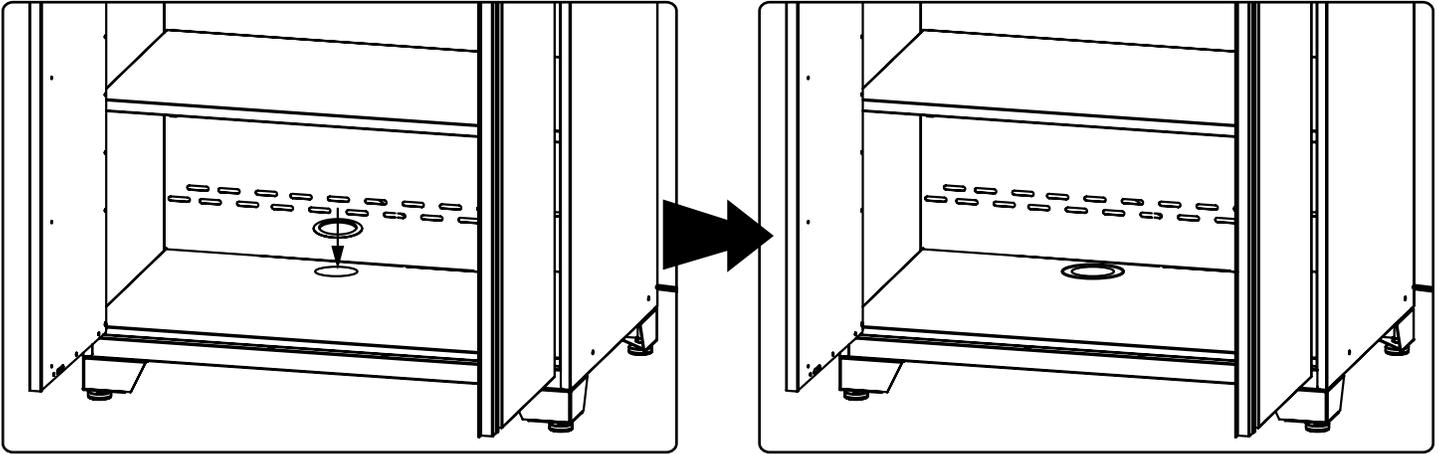

- 2** The utility access hole allows easy connection to power outlet.

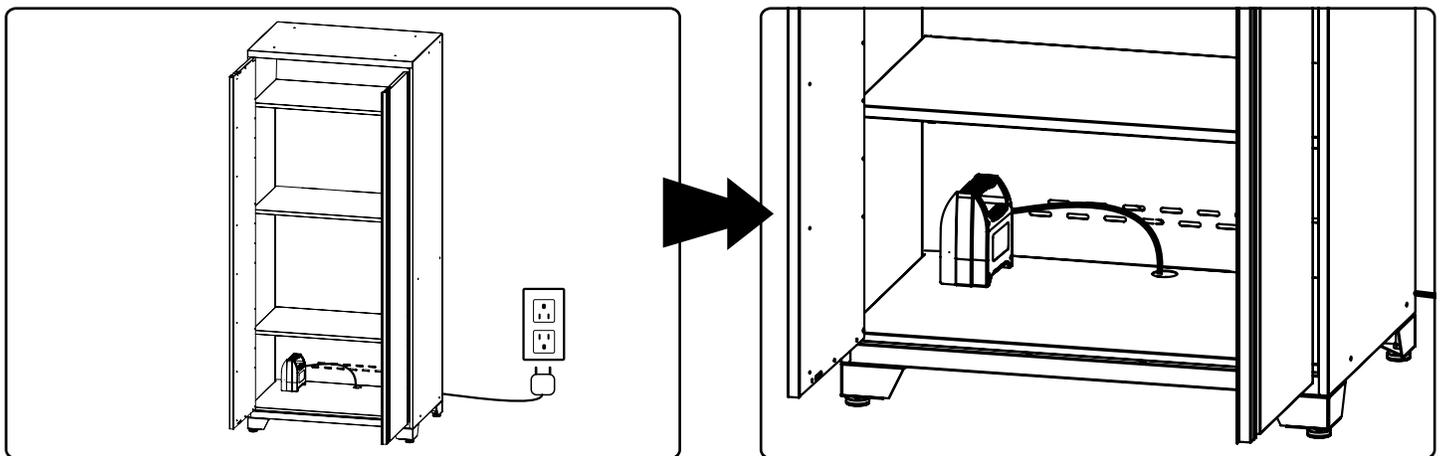

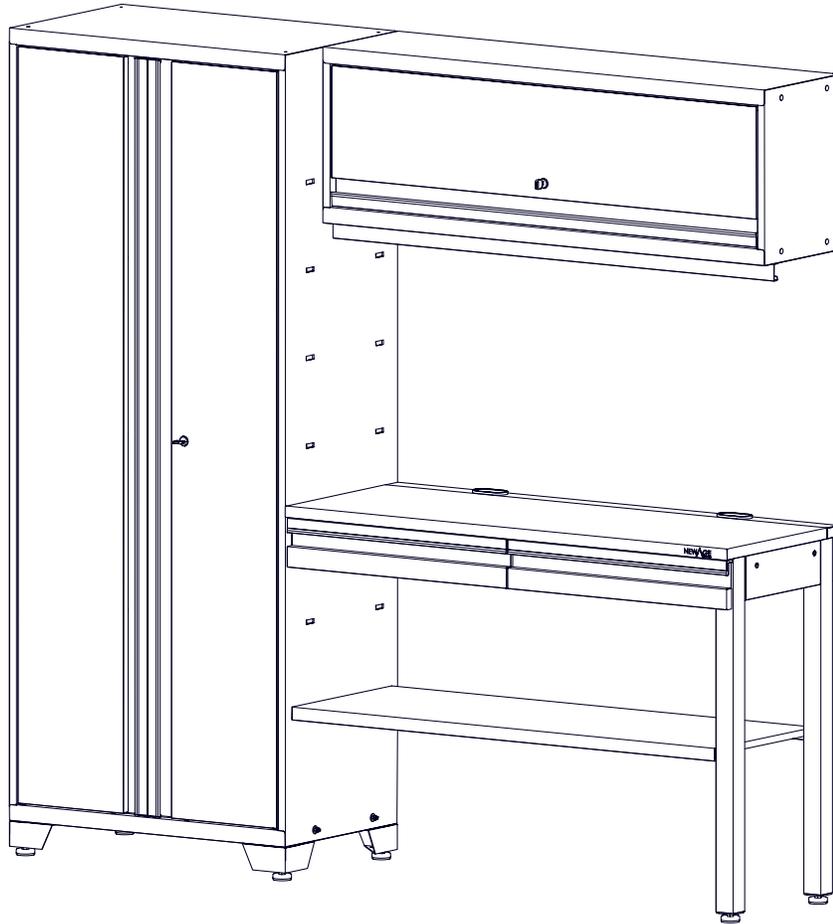

ボックスタイプボールドシリーズ ガレージ 設置ガイド

警告:非常に重い製品です!



腰や背中を痛めないよう、キャビネットやロッカーの移動、組み立て、設置は2人以上で行ってください。キャビネットの近くでは、お子様から目を離さないでください。キャビネットが正しく設置されていない場合、転倒の危険性が高くなります。深刻な怪我の原因とならないよう、キャビネットは壁にしっかりと取り付けてください。



注意:



キャビネットが破損していますか?
ご不明な点がございましたら、販売店にお問い合わせください。

インデックス


箱から取り出す	3
必要な道具	3
同梱部品	4
スペアパーツ	5
ワークトップ、耐荷重	6
脚の取り付け	7
ロッカーを石膏ボードに取り付ける	8
ウォールキャビネットをロッカーに固定する	9
ウォールキャビネットを石膏ボードに取り付ける	10
ライトバランスをウォールキャビネットに取り付ける	11
ワークベンチを取り付ける	12
ロッカーにワークベンチを取り付ける	13
引き出しを取り付ける	14
ワークベンチを壁に取り付ける	15
ワークベンチシェルフを取り付ける	16
棚板とクローゼットロッドを挿入する	17
配線口	18

箱から取り出す


- 覆われた平らな場所に置きます。
- 段ボール、発泡梱包材、透明ビニール袋をすべて取り除きます。
- 梱包材はすべて廃棄/リサイクルします。
- 箱の中身をすべて確認し、必要な工具を揃えます。以下のリストの「部品」と「必要な工具」をご参照ください。

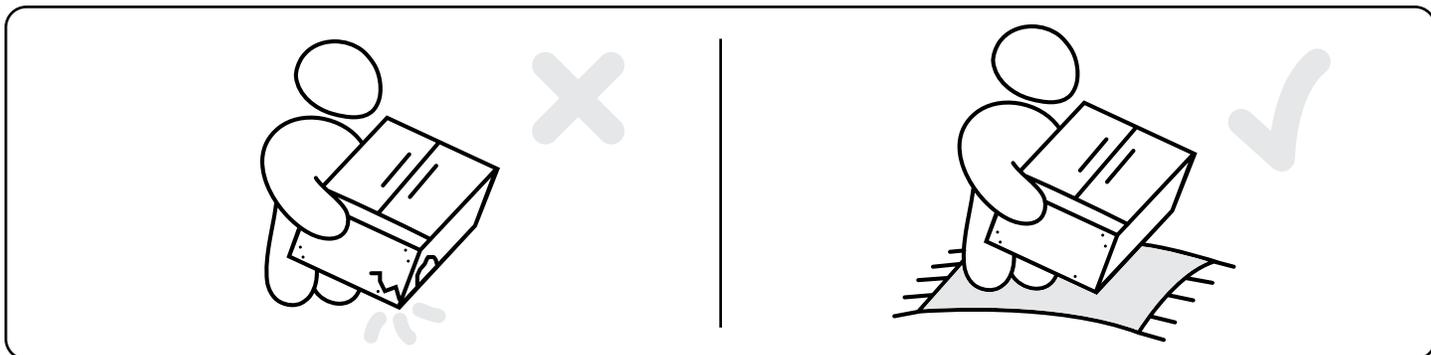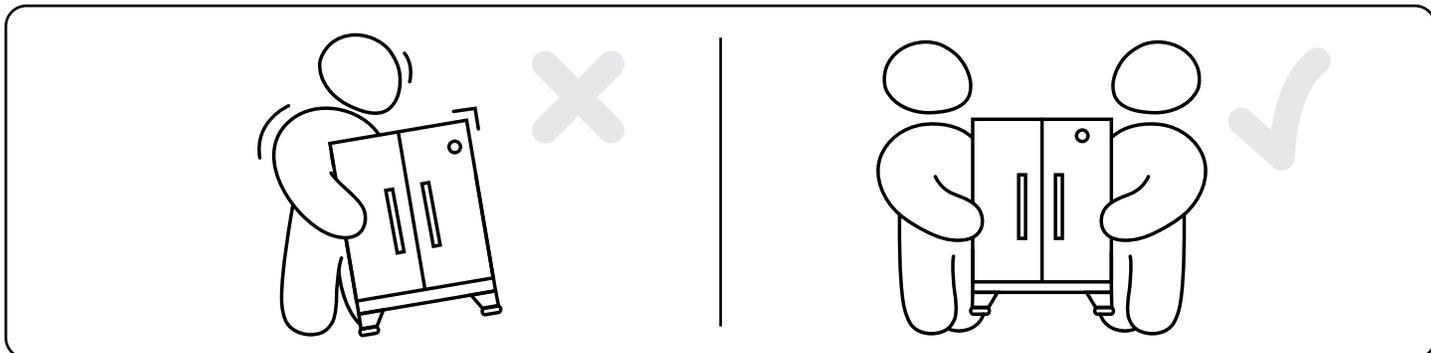

必要な道具



1 x 調節可能レンチ



1 x 12" マグネティックレベラー



1 x スタッドファインダー



1 x 巻き尺




1 x 7/16" ソケットド
ライバーレンチ


1 x 8 mm ソケットド
ライバーレンチ




1 x 7/16" ソケットド

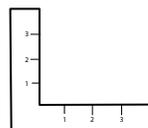


1 x セットス
クエア




1 x 鉛筆

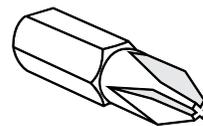

1 x #2ビット
(プラス)




1 x #2ヘッドスクリ
ュードドライバー
(プラス)



1 x #3ヘッドスクリ
ュードドライバー
(プラス)



1 x
コードレスパワードリル

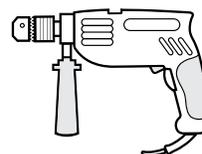


1 x ハンマードリル
(レンガ用オプション)



1 x レンガ用ビット

同梱部品

タイプ	ハードウェア	ロッカー	ウォール	ワークベンチ
ハードウェア・ パック	1/4" ID x 1/2" OD ワッシャー	22	4	4
	1/4" ロックナット	8	4	4
	1/4" x 0.9" フェンダーワッシャー	4	4	2
	1/4" x 2.5" ウォールスクリュー	4	4	2
	1/4"-20x5/8 "六角ボルト	10	4	4
	脚取り付けネジ	17	0	0
	キー	2	2	0
	ライトバランスボルト	0	3	0
	ライトバランスナット	0	3	0
付属部品	プラスチック穴キャップ	16	8	0
	調節可能な水平調整脚	4	0	2
	ゴム製グロメット	1	0	0
	ゴム製エッセンシャルグロメット	0	0	2
	調節可能な棚板	3	0	0
	キャビネット脚	4	0	0
	クローゼットロッド	1	0	0
	EVAフォーム引き出しライナー	0	0	2
ライトバランス	0	1	0	

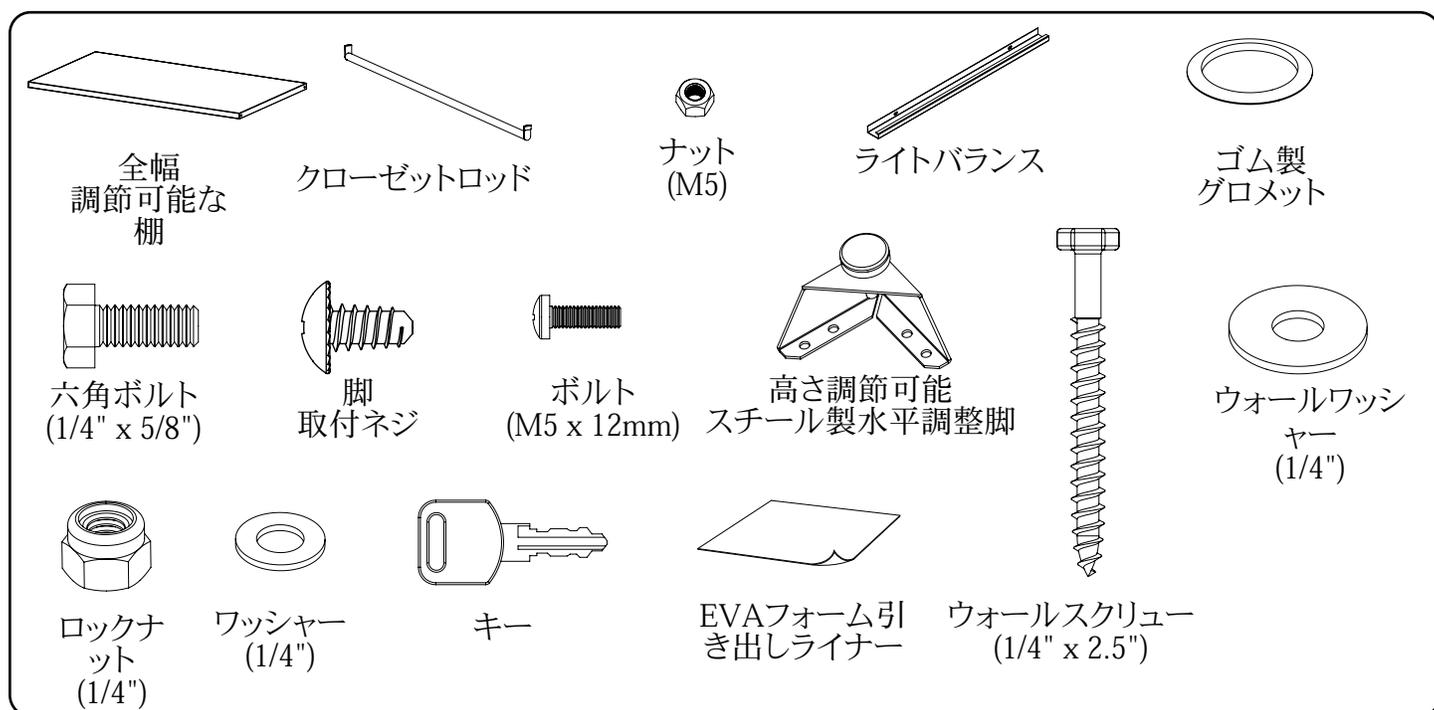


スペアパーツ

S. No	品番	説明	BOM QTY	スペアパーツ SKU	スペアパーツ 数量
1	PB3-281.002A-01-XX H00165A-01	60インチ エッセンシャルシングルウォールドア	1	74000 - レッド 74001 - ブラック 74002 - プラチナ 74003 - グレー	1
2	PB3-287A-01-XX PB3-287.002A-01-XX H00691A-01 H00110A-01	60インチ ワークトップシェルフ	1	74004 - ブラック 74005 - ホワイト	1
3	PB3-285.002A-01	60インチワークトップ引出し	2	74006 - レッド 74007 - ブラック 74008 - プラチナ 74009 - グレー	1
4	H00850A-01	ゴム製エッセンシャルグロメット	2	74010	1
5	PB3-293A-01 H00691A-01 H00110A-01	エッセンシャルワークベンチレッグ	(2個入り)	74011 - ブラック 74012 - ホワイト	(2個入り)
6	H00864A-01	ドア用3インチガススプリング	2	74013	1
7	PB3-05.003A-01-XX PB3-05.004A-01-XX H00165A-01	ボールド3.0 - 30インチ ロッカードア	(2個入り)	49031 - ブラック 50031 - グレー 50229 - レッド 56759 - プラチナ	(2個入り)
8	PB3-05.005A-01-XX	ボールド3.0 - 30インチ クローゼットロッド	1	50033 - ブラック 56760 - ホワイト	1
9	PB3-05.002A-01-XX	ボールド3.0 - 30インチ ロッカーシェルフ	(2個入り)	50032 - ブラック 56761 - ホワイト	(2個入り)
10	H00051A-01	ゴム製電源コード用グロメット	1	50982 - ブラック	1
11	PB3-16.005.01A-01-XX H00088A-01	ボールド3.0フィート(ハードウェア付)	(4個入り)	50971 - ブラック 50981 - ホワイト	(4個入り)
12	H00090A-01 H00165A-01	ロッカーロック(シリンダーおよびキー)	1	50976	1
13	H00084A-01	スレッド式水平調節脚	(4個入り)	50972	(4個入り)
14	PB3-14.003.04A-01 PB3-14.003.05A-01	プラスチック押出エンドキャップ	(2個入り)	50973	(2個入り)
15	H00056A-01	スプリングピンヒンジ用プラスチックブッシング	(4個入り)	50238	(4個入り)
16	H00047A-01	スプリングピンヒンジ	(4個入り)	50995	(4個入り)
17	H00041A-01	ラグスクリュー - 0.25インチ x 2.5インチ	10	54038	1
18	H00042A-01	フェンダーワッシャー - 0.25インチ x 0.875インチ	10	54039	1
19	H00043A-01	六角ボルト - 0.25-20x0.625インチ	18	54040	1

スペアパーツ


20	H00044A-01	ワッシャー - 0.25ID x .75OD	30	54041	1
21	H00055A-01	ロックナット - 0.25インチ	16	54042	1
22	H00169A-01	ウッドスクリュー(#8 x 5-8インチ)		54043	1
23	H00071A-01	GB818-M5x12	3	54046	1
24	H00072A-01	M5ナット	3	54047	1
25	PB3-281.003A-01-XX H00071A-01 H00072A-01	60インチ エッセンシャル - ウォールライトバ ランス(ハードウェア付)	1セット	74014 - ブラック 74015 - ホワイト	1セット
26	PB3-313.001A-01	ボールドシリーズ 60 インチ エッセンシャル ラバーウッド ワークトップ	1	37510	1

ワークトップ




60°ワークトップ

可搬重量

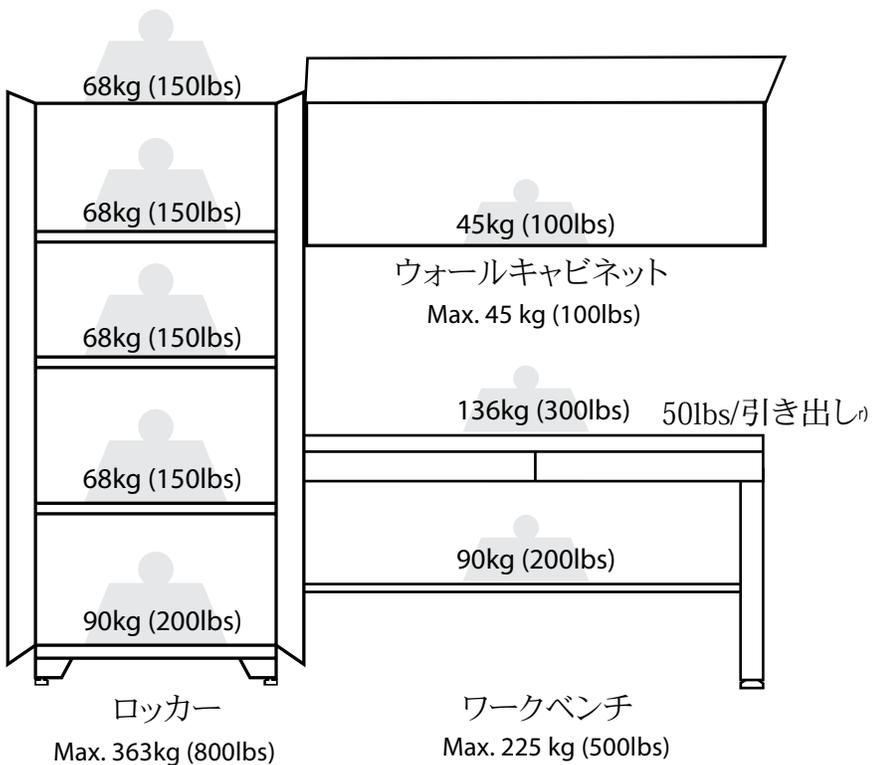


脚の取り付け


i 必要な部品。

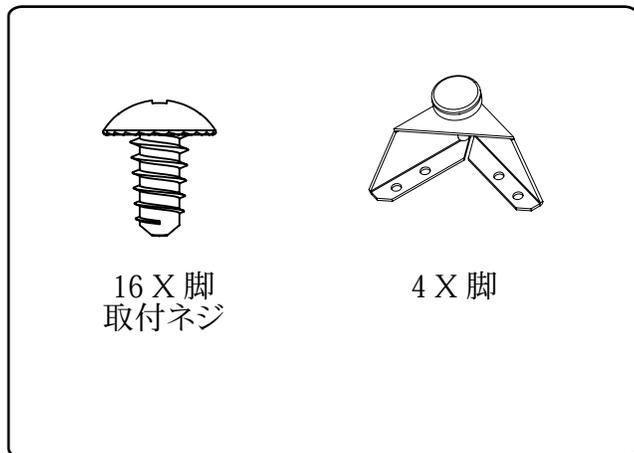


2 水平調節脚4つすべてを脚に取り付けます。

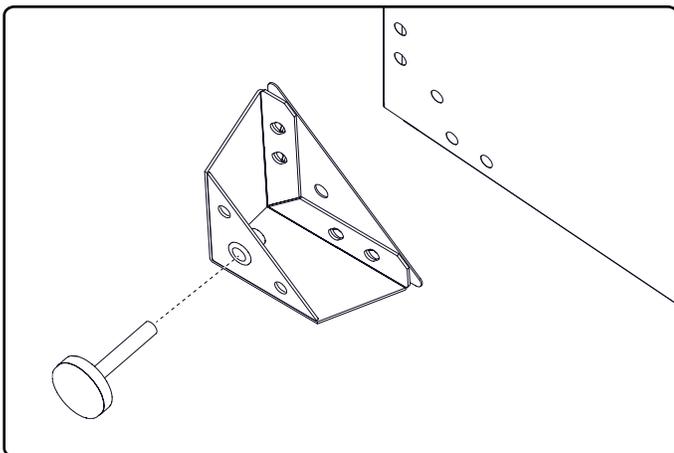


4 ステップ3を各コーナーで繰り返します。

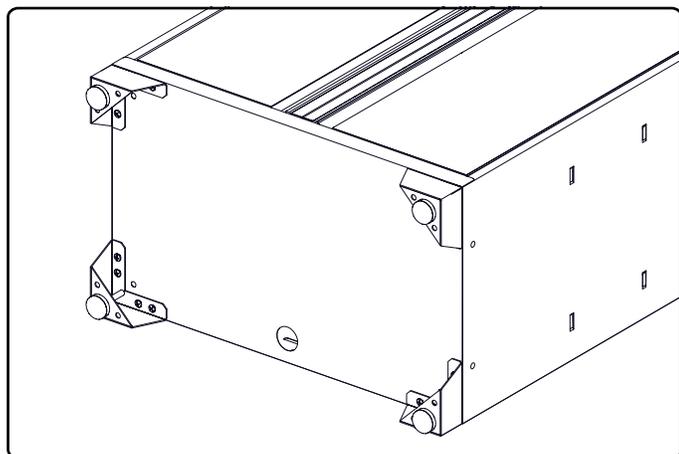


1 棚や落ちやすいものを取り除きます。キャビネットを仰向けにします。

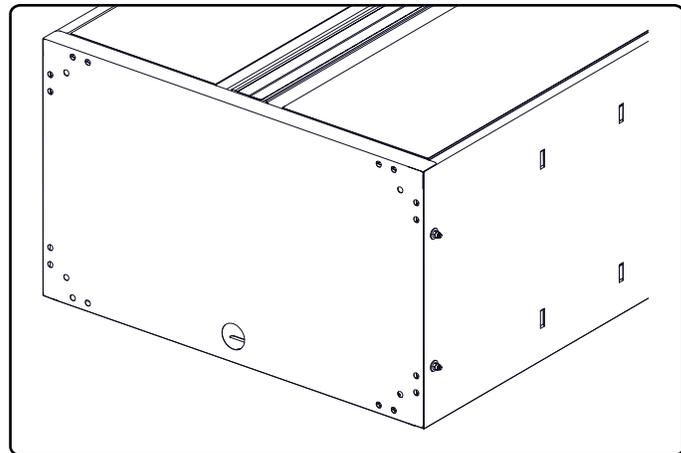

3 脚をキャビネットの端に合わせます。3番のプラスドライバーを使って、脚取り付けネジ4本をねじ込みます。

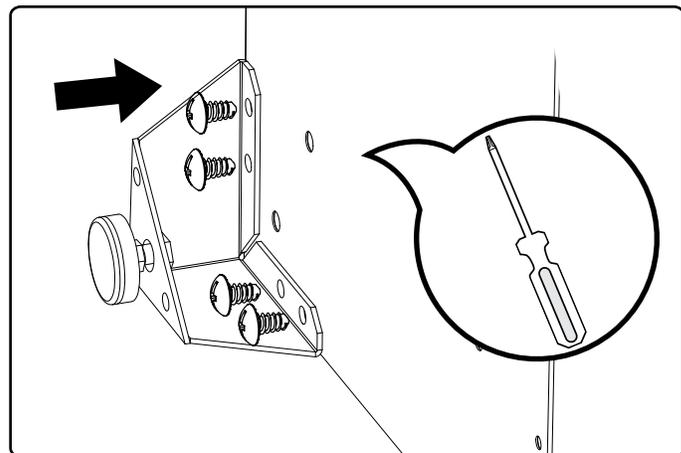


5 スタンドと水平キャビネット。

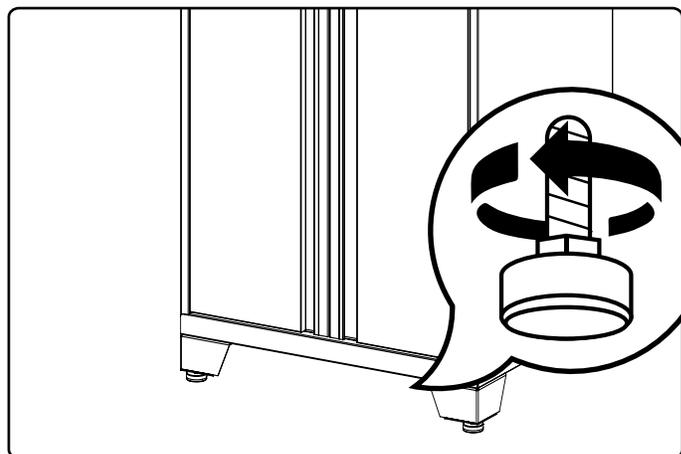


ロッカーをウォールスタッドに取り付ける


i 必要部品

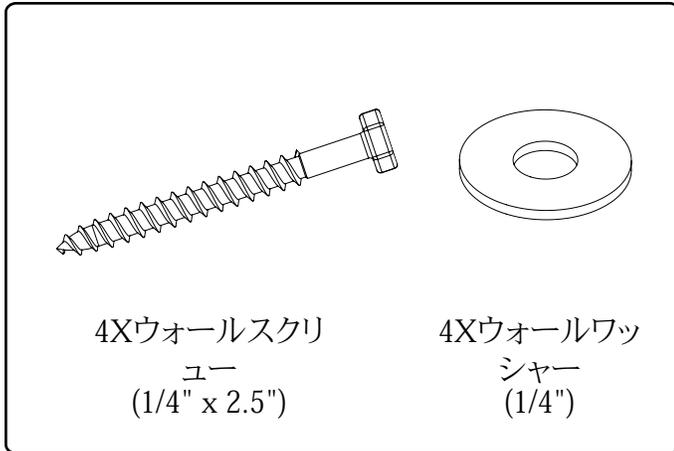


1 スタッドファインダーを使って、スタッドの位置を確認し鉛筆で壁に印をつけます。

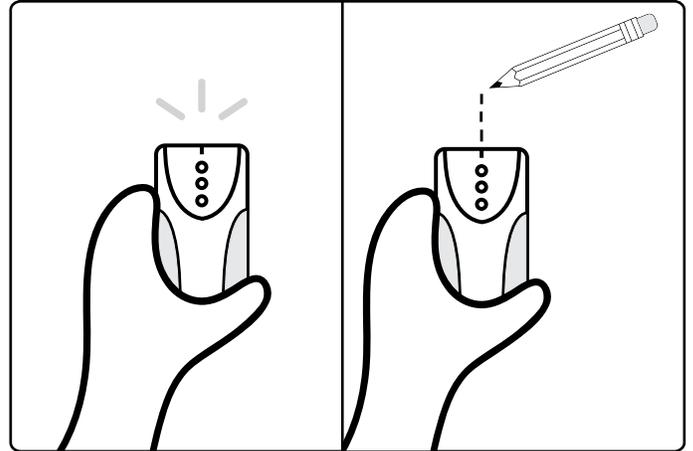


2 キャビネットを壁にぴったりとつけます。

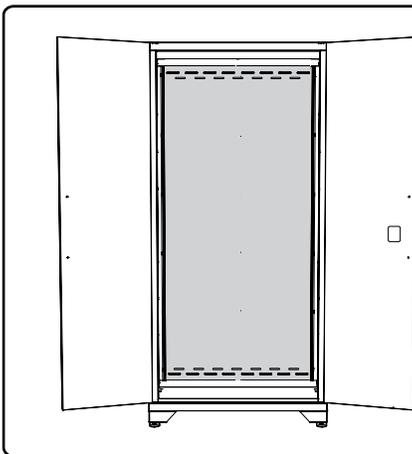


3 キャビネットをスタッドマークに合わせます。

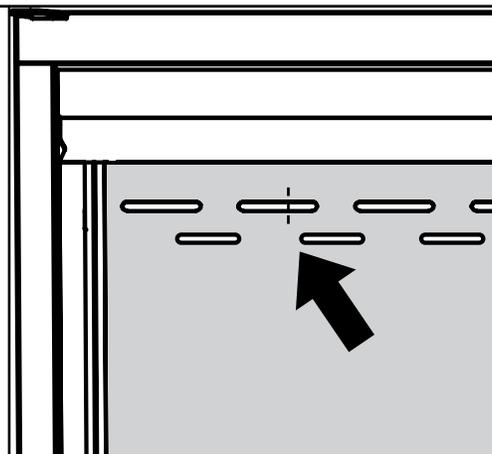

4 脚を調整してキャビネットを水平にします

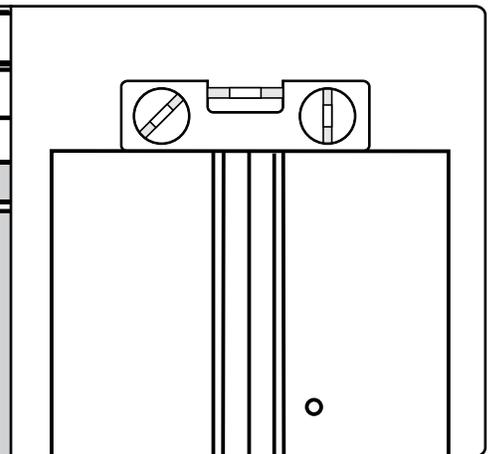

5 ウォールスクリュー4本とワッシャーを穴に差し込み、スタッドに取り付けます。

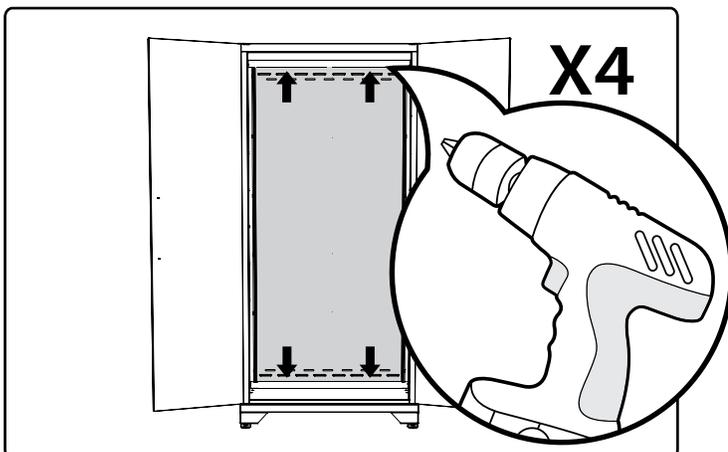


i レンガ。


- ステップ2~4に従います。
- ハンマードリルとレンガ用ドリルを使って、4つの下穴を開けます。
- 次を使って、ステップ5を行います。
- 壁に4 x (2 1/4" x 1/4") Tapcon製コンクリートアンカーを使用します。(別売)
- または4 x (#10 x 2") ネジと3/16" 石工用プラグで壁に固定します。(別売)

ウォールキャビネットの設置


必要部品

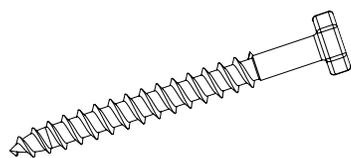


4xウォールスクリ
ュー
(1/4" x 2.5")



4xウォールワッ
シャー
(1/4")



2x 六角ボル
ト
(1/4" x 5/8")




4x ワッシャ
ー
(1/4")




2x ロックナット
(1/4")

1 スタッドファインダーを使って、スタッドの位置を確認し鉛筆で壁に印をつけます。

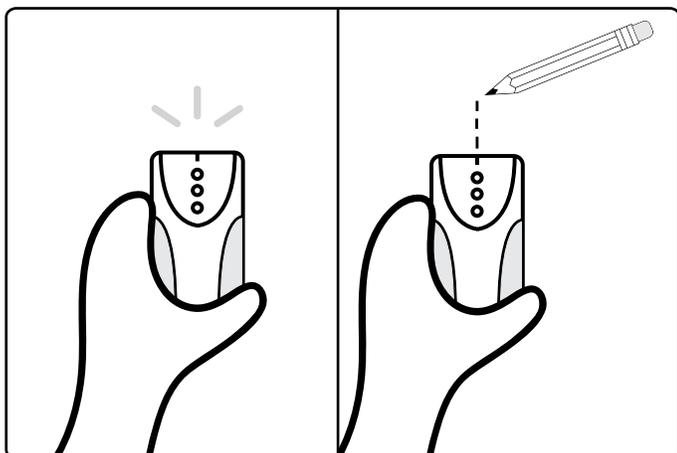


2 六角ボルト2本、ロックナット2本、ワッシャー4つを使って、ウォールキャビネットをロッカーに固定します。上部にある2つの接続ホールを使用します。

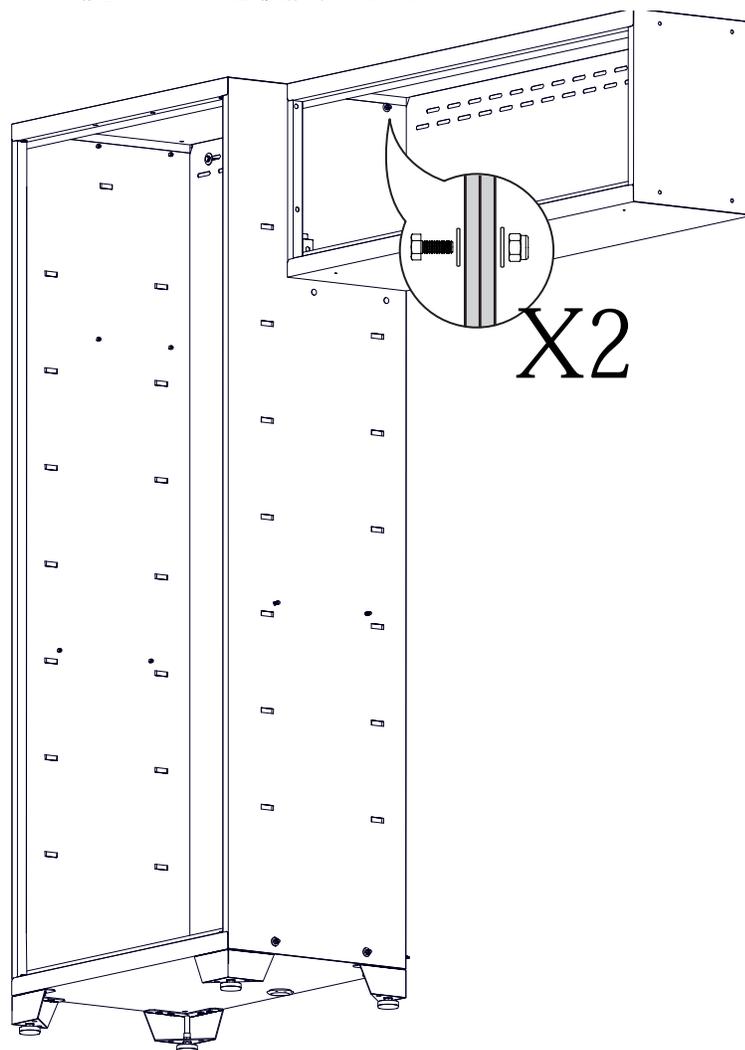


注:
ウォールキャビネットはロッカーの左右どちらにも取り付けできます。

ウォールキャビネットの設置


- 3** キャビネットをスタッドマークに合わせます。

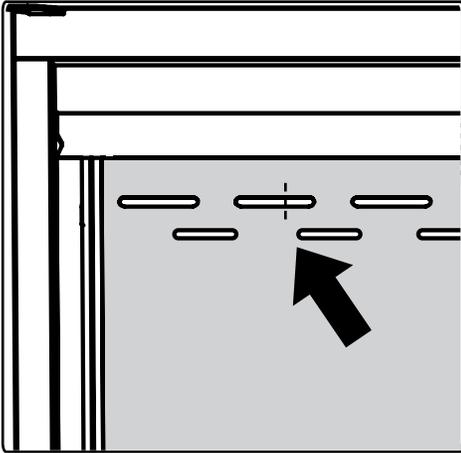

- 4** レベラーを使ってキャビネットを水平にします。

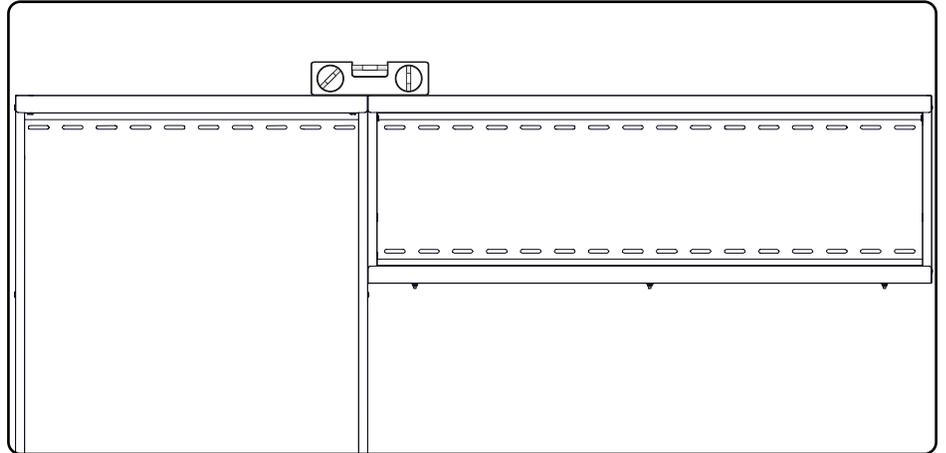

- 5** ウォールスクリュー4本とワッシャーを穴に差し込み、スタッドに取り付けます。

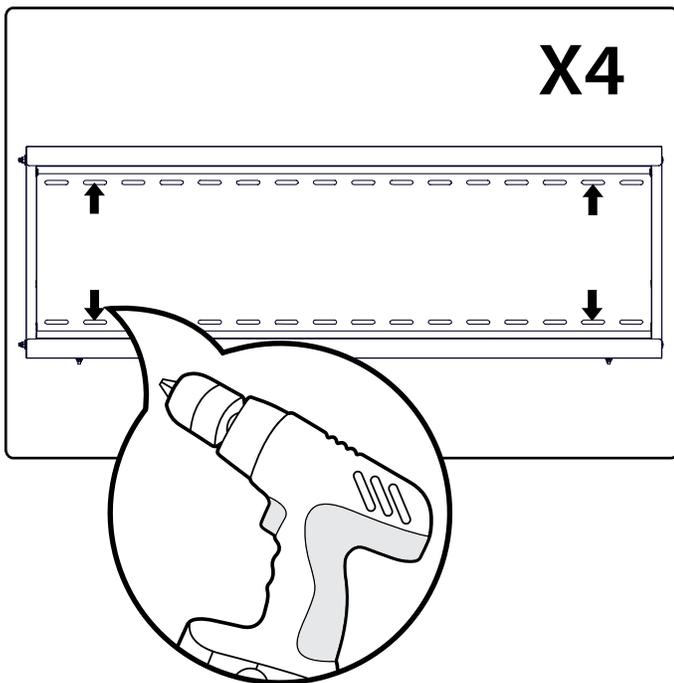


i レンガ。


- ステップ3~4に従います。
- ハンマードリルとレンガ用ドリルを使って、4つの下穴を開けます。
- 次を使って、ステップ3を行います。
- 壁に4 x (2 ¼" x ¼") Tapcon製コンクリートアンカーを使用します。(別売)
- または4 x (#10 x 2")ネジと3/16"石工用プラグで壁に固定します。(別売)

ライトバランスをウォールキャビネットに取り付ける


i 必要な部品。

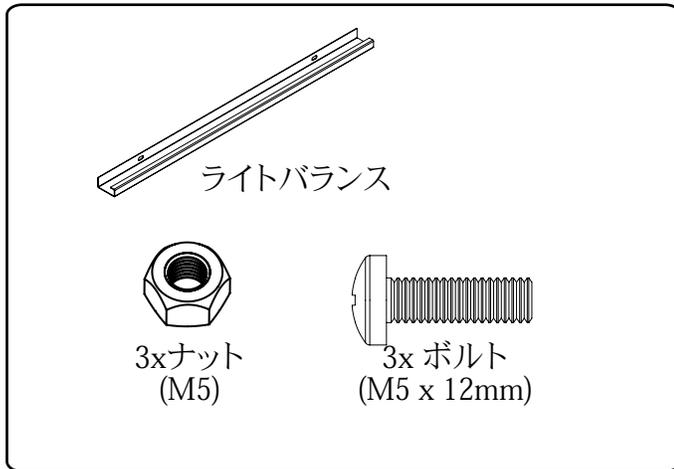



1 バランスの穴をキャビネットに合わせて

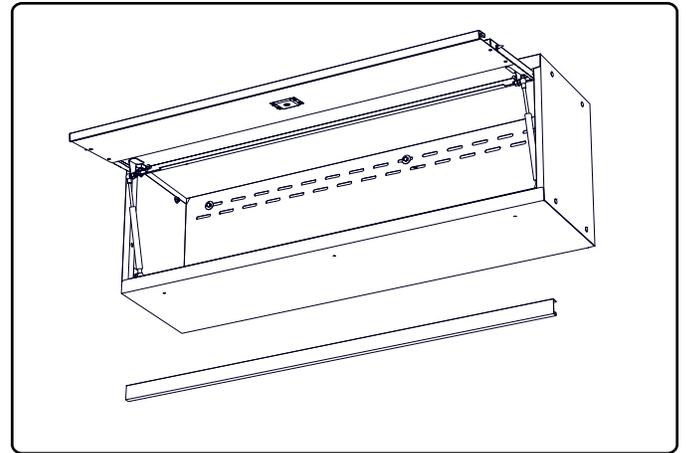

2 ボルトとナットを挿入し、締め付けます。

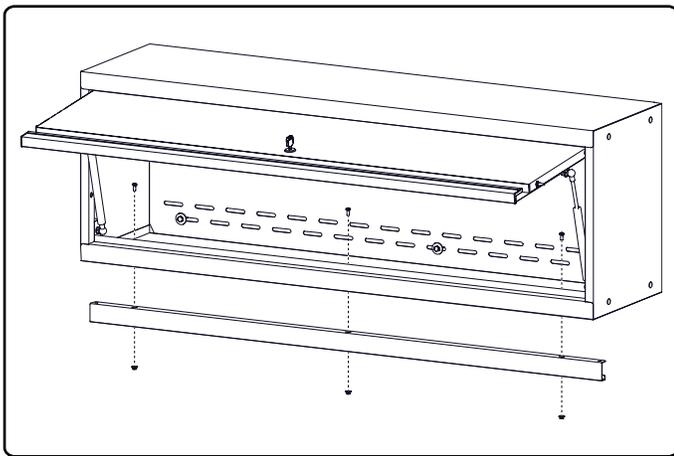


3 断面図

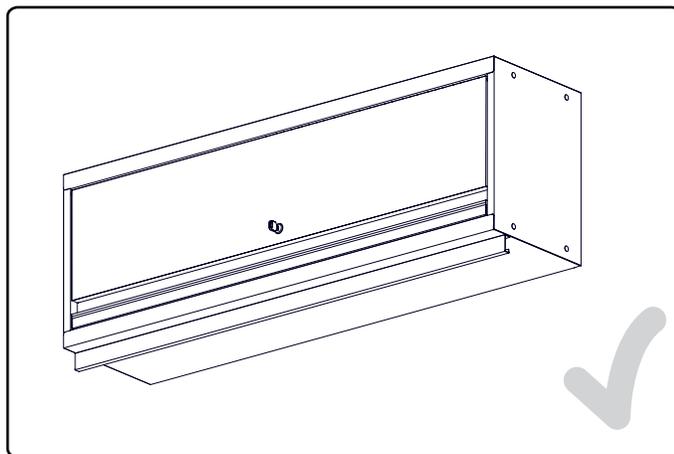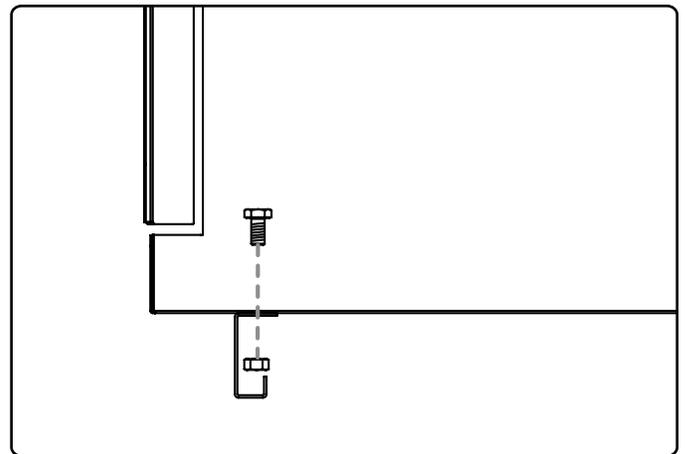

注：
PVCの汚れ止め板を取り付ける場合は、
このステップを最後に残しておきます。



ワークベンチを取り付ける

i 必要な部品。


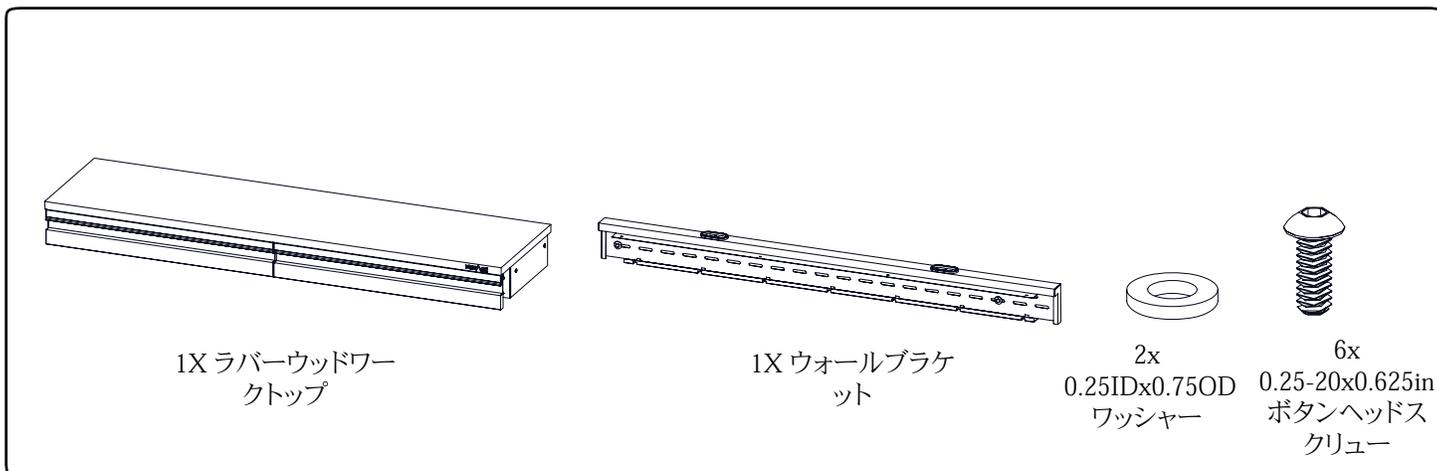


1 あらかじめ取り付けられているワークトップを逆さにして、ウォールブラケットに取り付けます。

2 サイドブラケットにあるスロットに脚をロックして取り付けます。

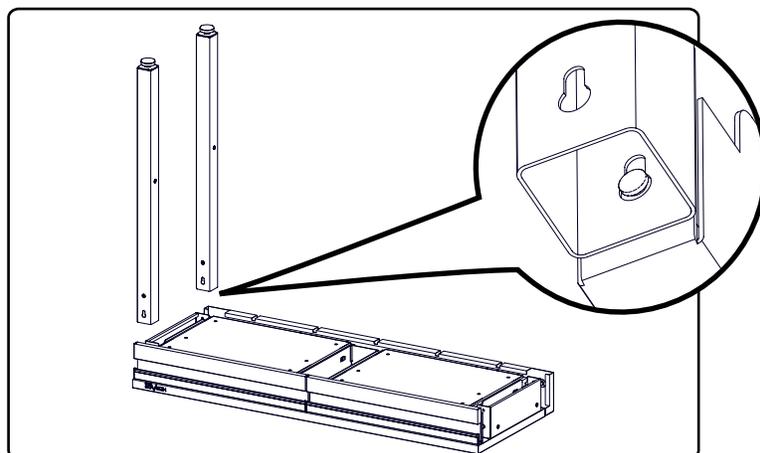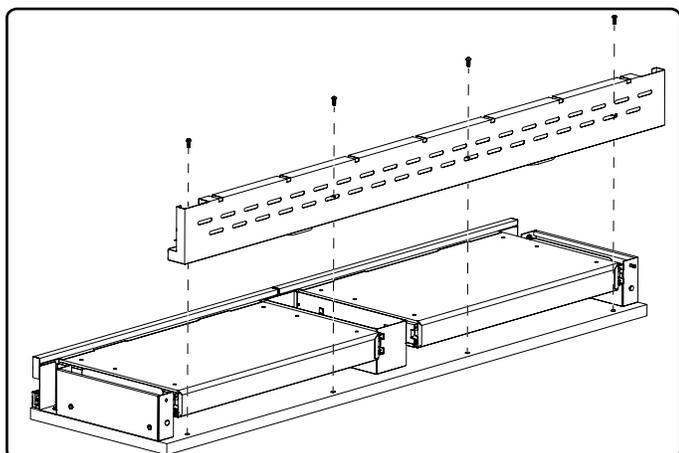


3 ネジとワッシャーで脚をブラケットに取り付けます。

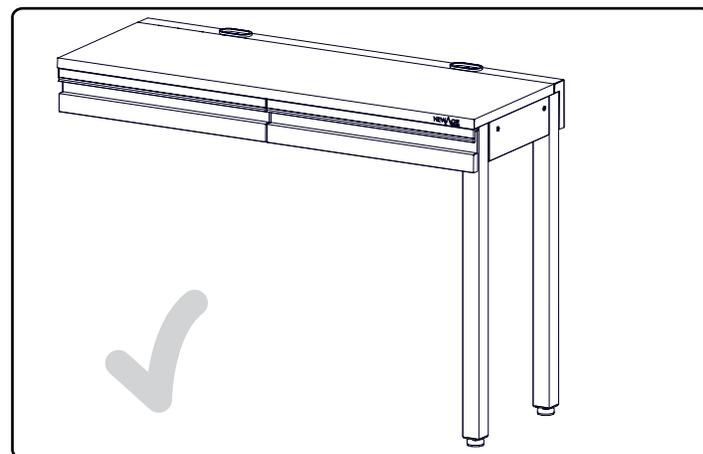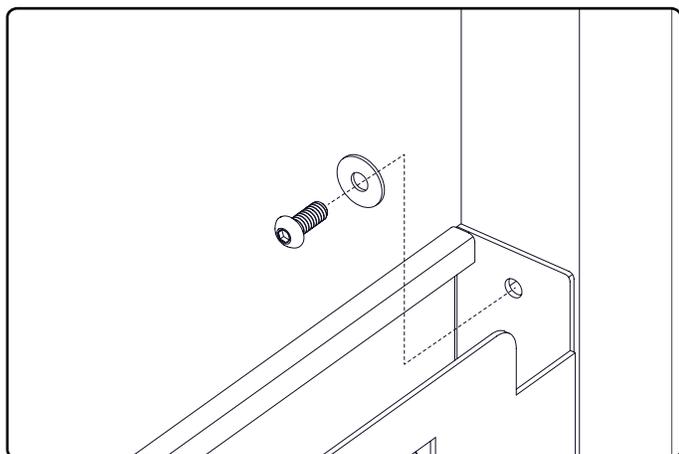


ワークベンチをロッカーに取り付ける

1 ドアパネルの上部と下部にあるスプリングピンを引き下げてドアを外します。



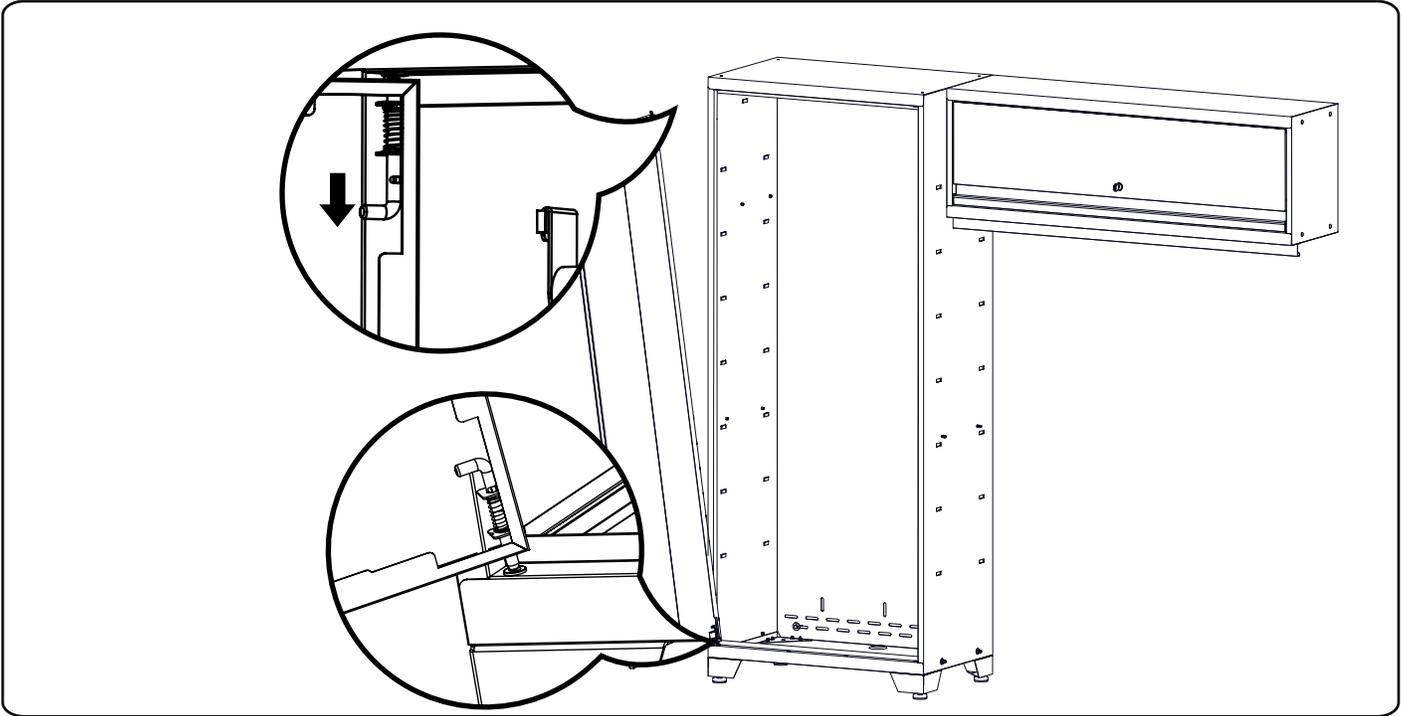


2 2本の1/4"六角ボルトと1/4"ワッシャーを締め、ワークベンチをロッカーに取り付けます。


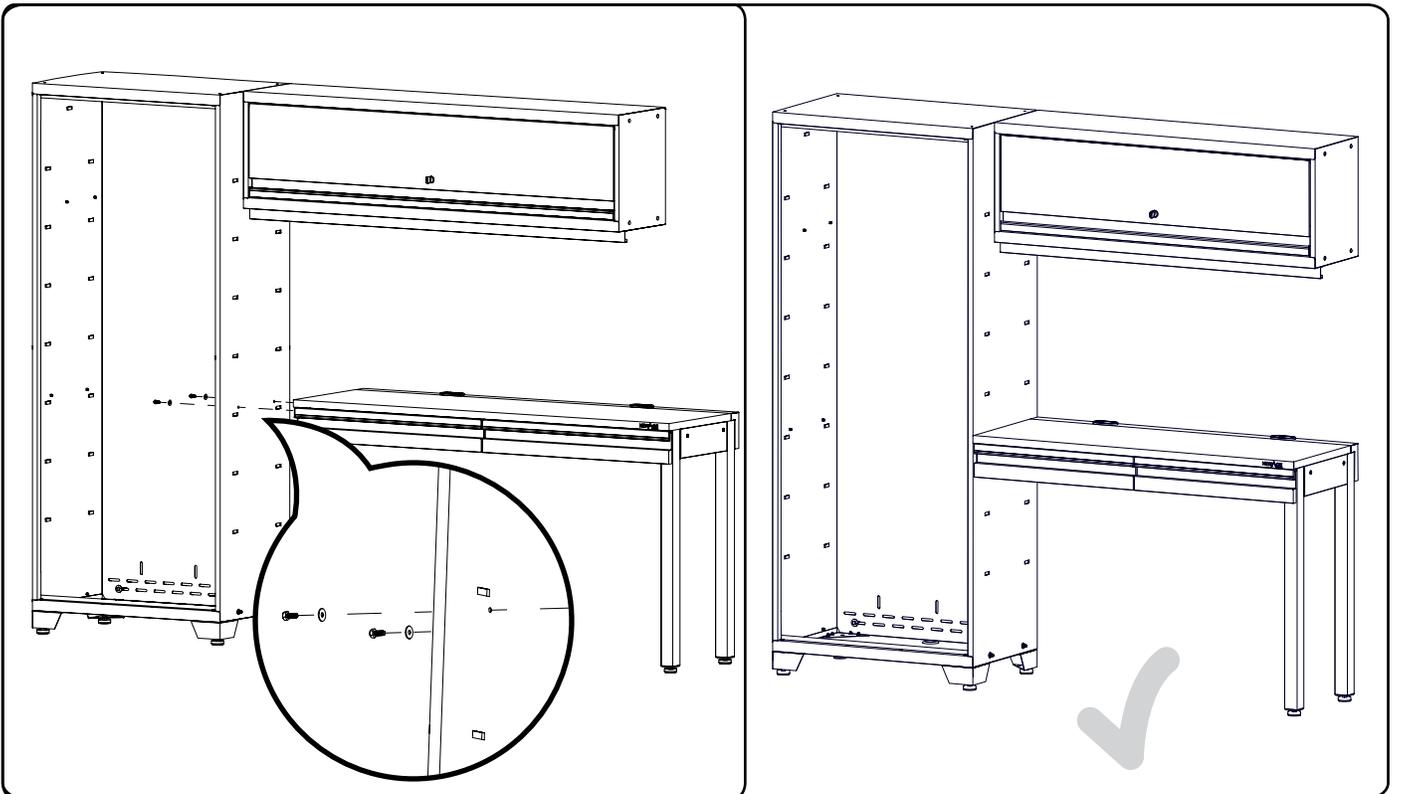


引き出しの取り外しと取り付け

引き出しを取り外す。

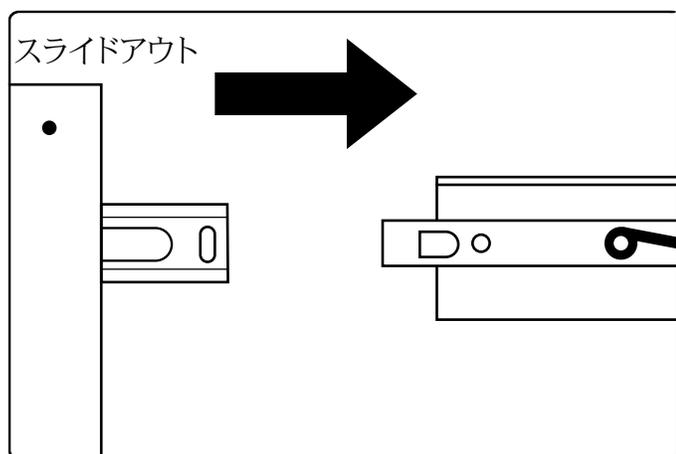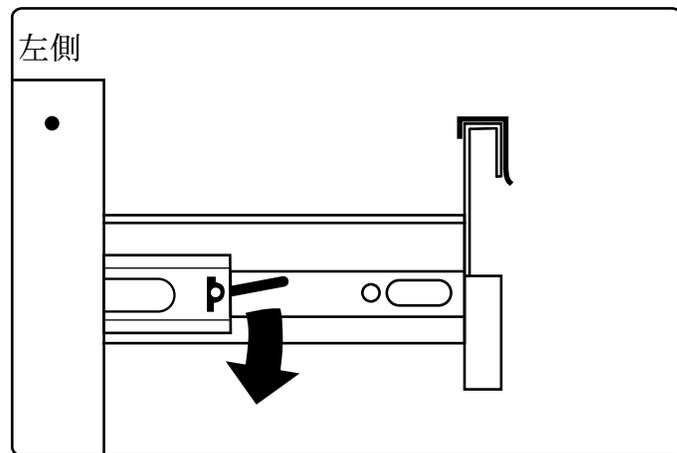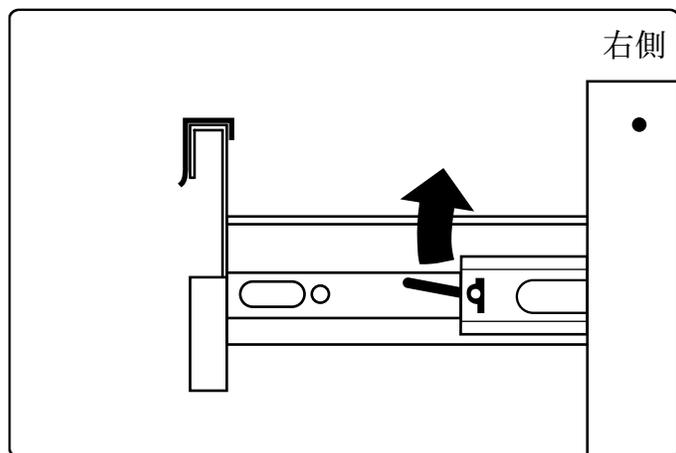


引き出しを挿入する。

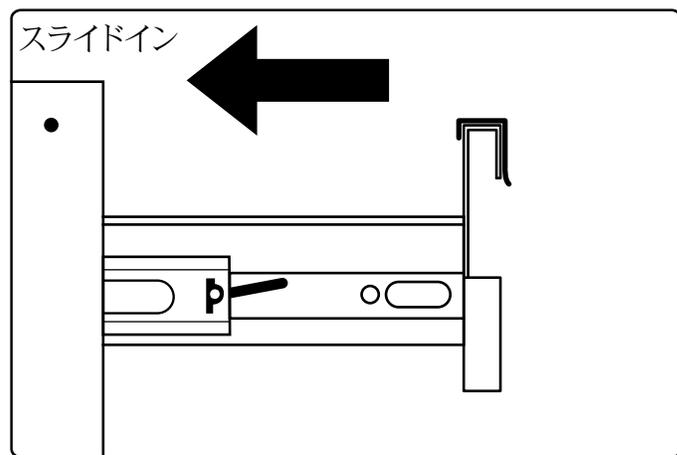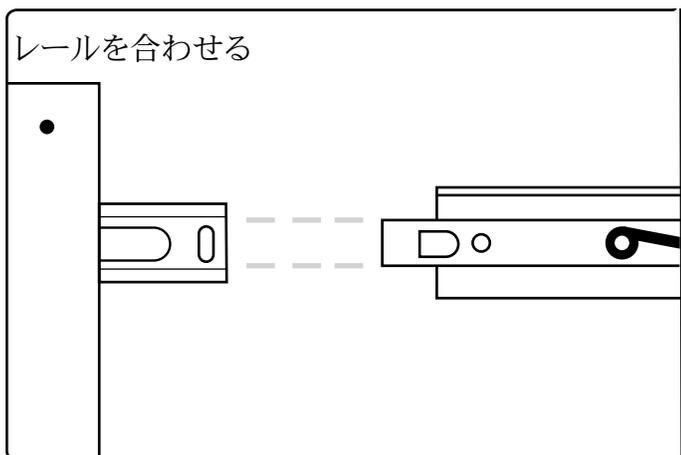


ワークベンチを壁に取り付ける


1 ワークベンチを壁に密着させます。

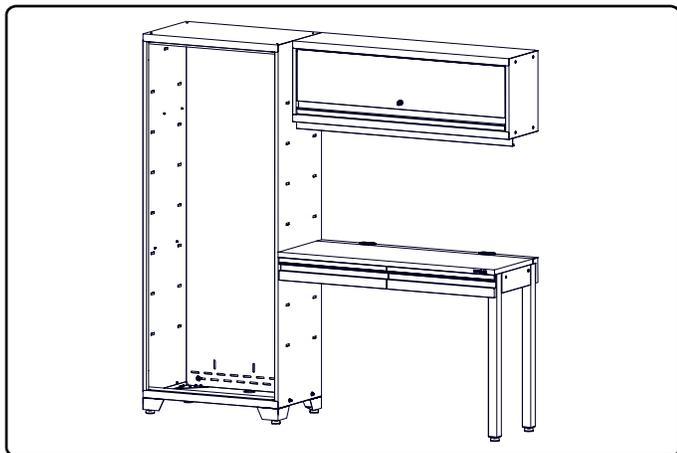


2 スライドから引き出しを外します。

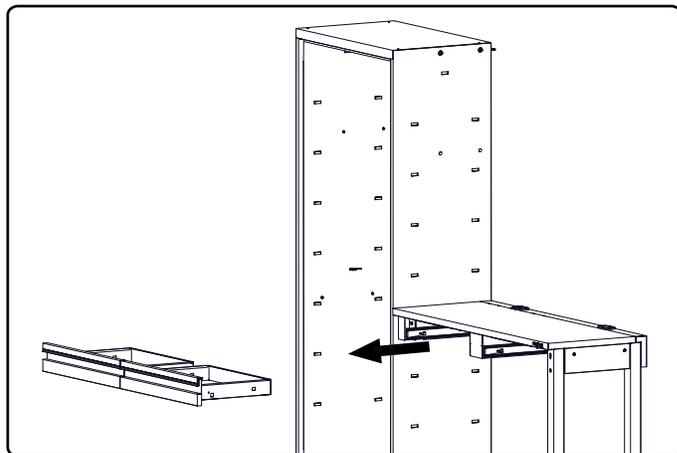


3 ワークベンチアセンブリをスタッドマークに合わせます。

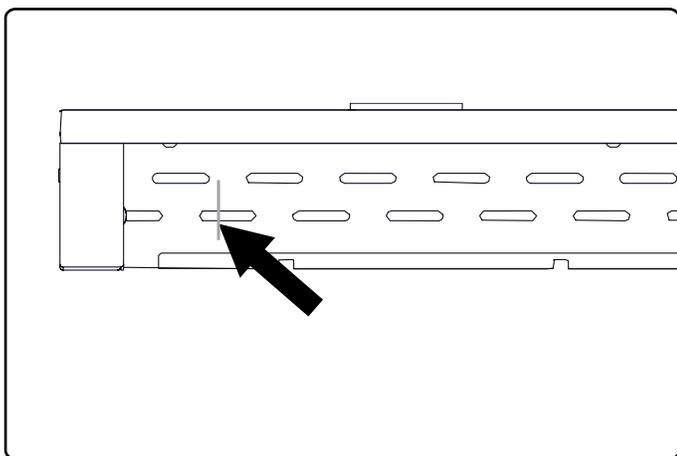

4 脚を調整してワークベンチを水平にします。

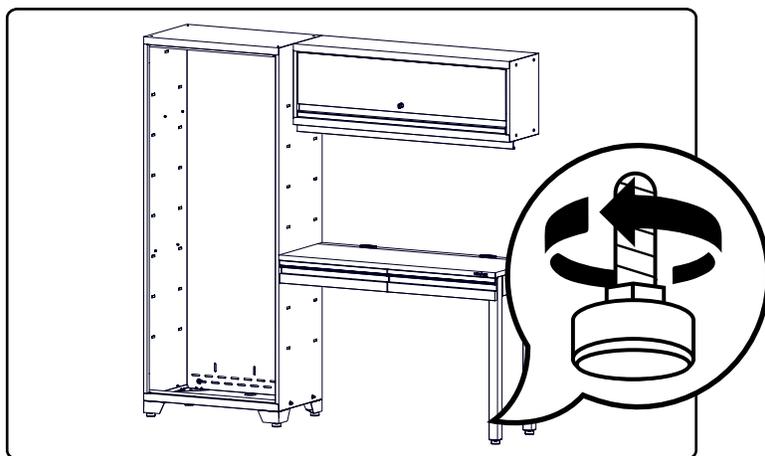

5 ウォールスクリュー2本とワッシャー2個を穴に差し込み、スタッドに取り付けます。

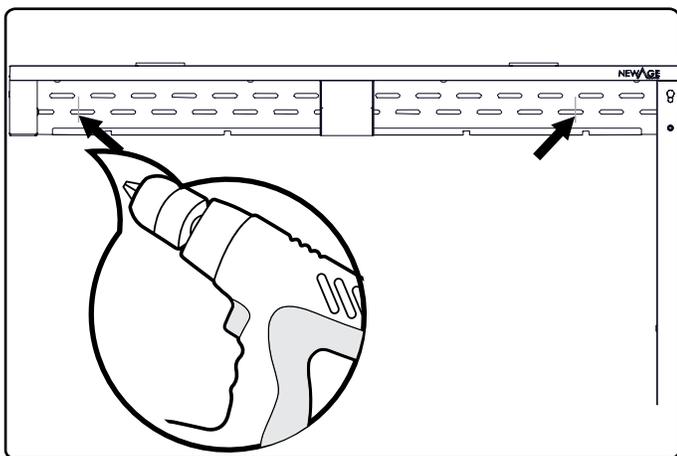


i レンガ。


- ステップ3~4に従います。
- ハンマードリルとレンガ用ドリルを使って、パーフォレーションストリップを通して2つの下穴を開けます。
- 次を使って、ステップ5を行います。
- 壁に2 x (2 1/4" x 1/4") Tapcon製コンクリートアンカーを使用します。(別売)
- または2 x (#10 x 2")ネジと3/16" 石工用プラグで壁に固定します。(別売)

ワークベンチシェルフを取り付ける


i 必要な部品。

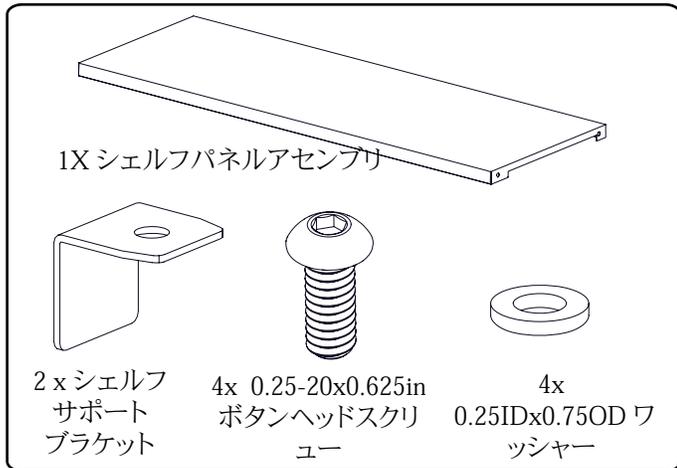


1 シェルフサポートブラケットをロッカーの指定位置に斜めに取り付けます。

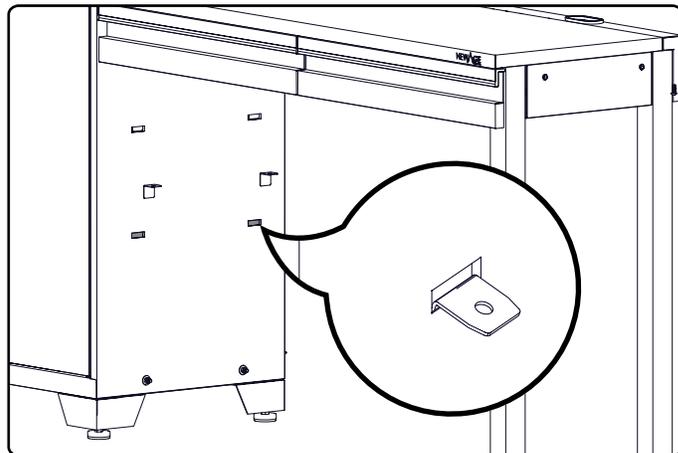



2 シェルフパネルアセンブリをブラケットに取り付けます。

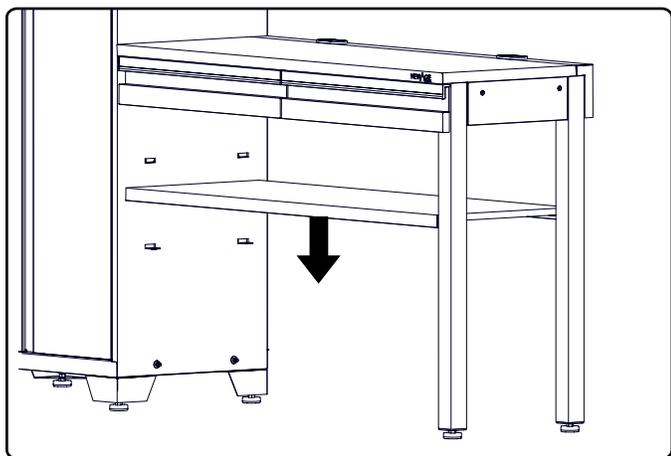

3 シェルフパネルをシェルフサポートブラケットにネジ2本とワッシャー2個で固定します。

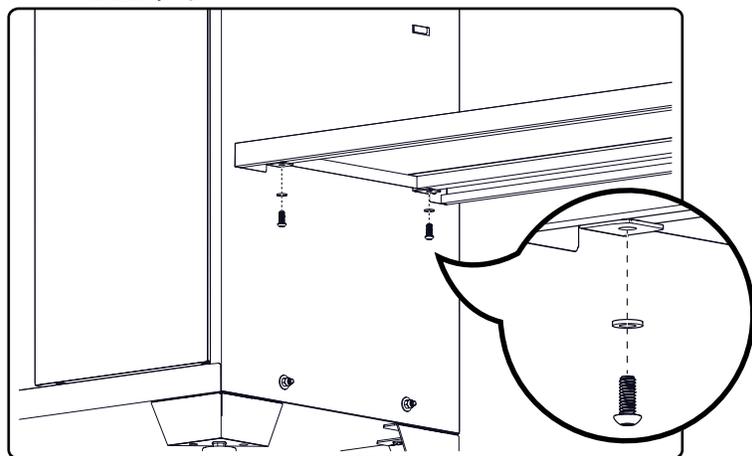


4 棚の反対側をワークベンチの脚にネジ2本とワッシャー2個で固定します。

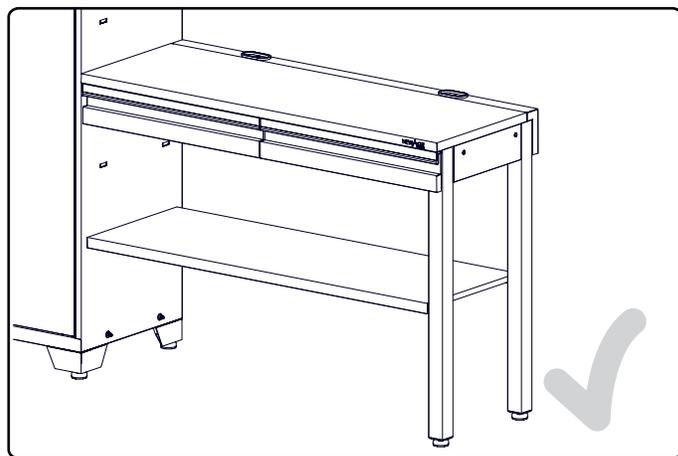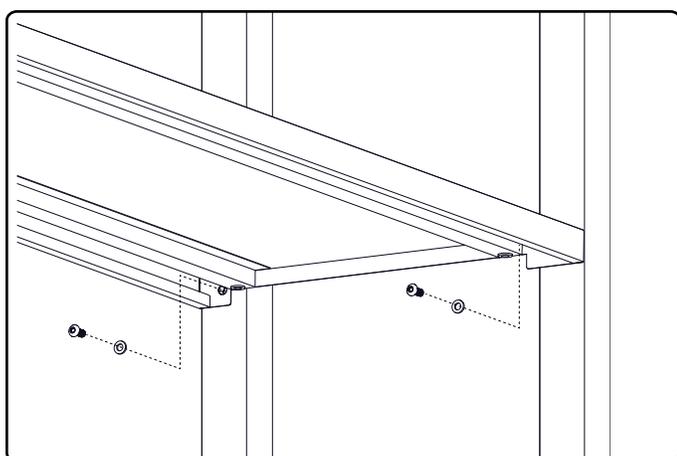


棚板とクローゼットロッドを挿入する


1 棚板を少し斜めに差し込みます。

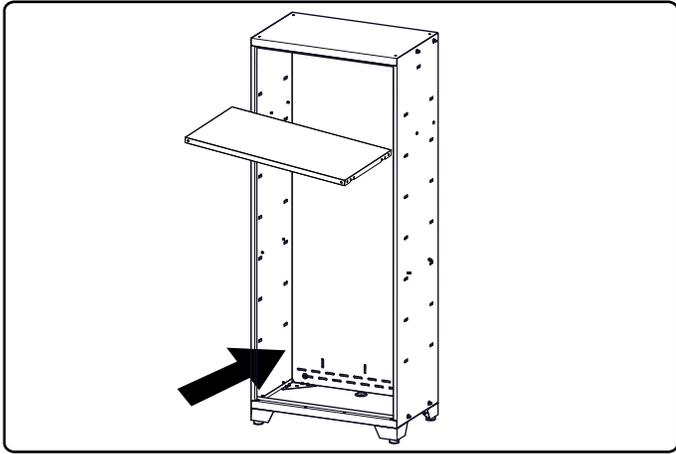


2 棚板を水平にします。

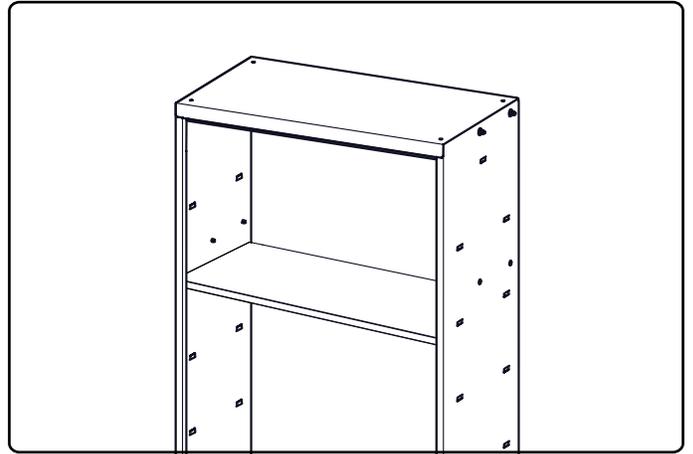


3 タブをスロットにスライドさせて棚をブラケットまで下げます。

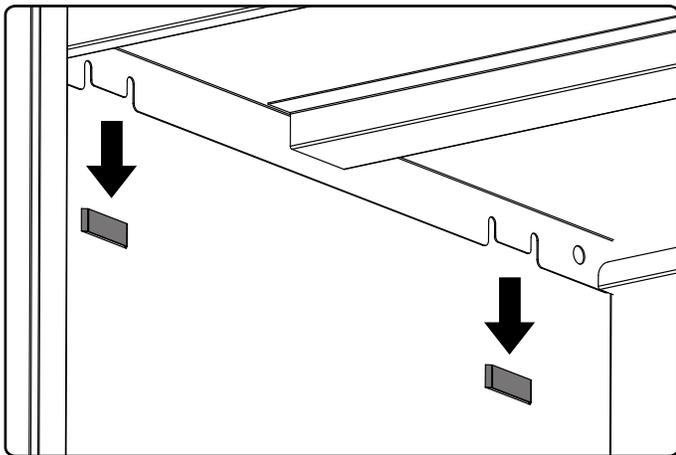


4 棚板が所定の位置にはまっていることを確認します。

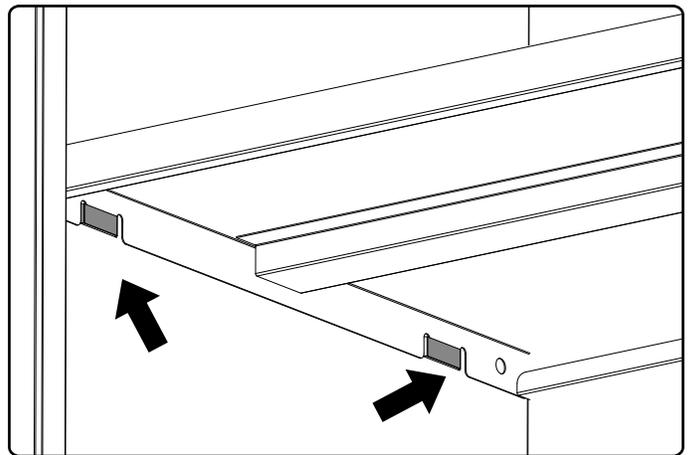


5 残りの棚板を挿入します。

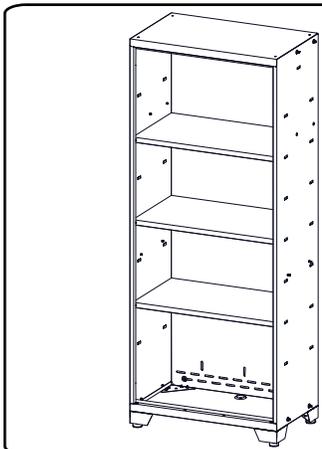

6 クローゼットロッドをキャビネットに少し斜めに差し込みます。

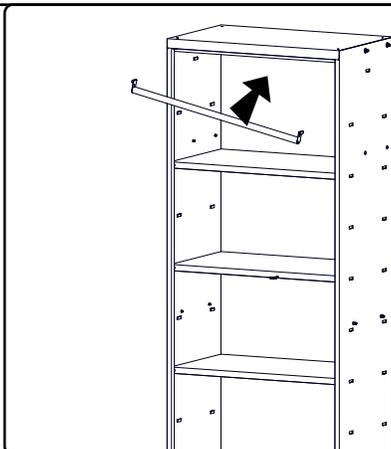


7 ロッドを水平にし、中央のスロットにスライドさせます。

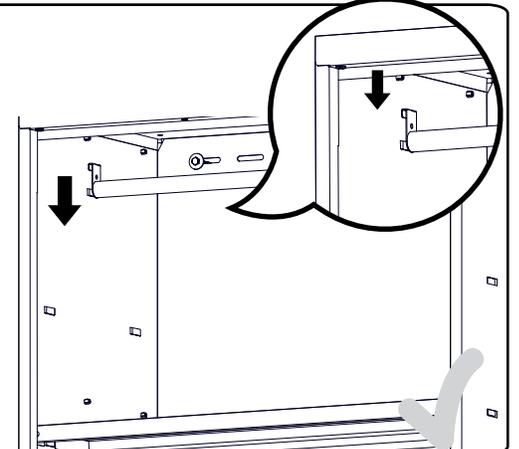

配線口

- 1** ゴム製グロメットを下のパネルの切り抜き穴に挿入します。

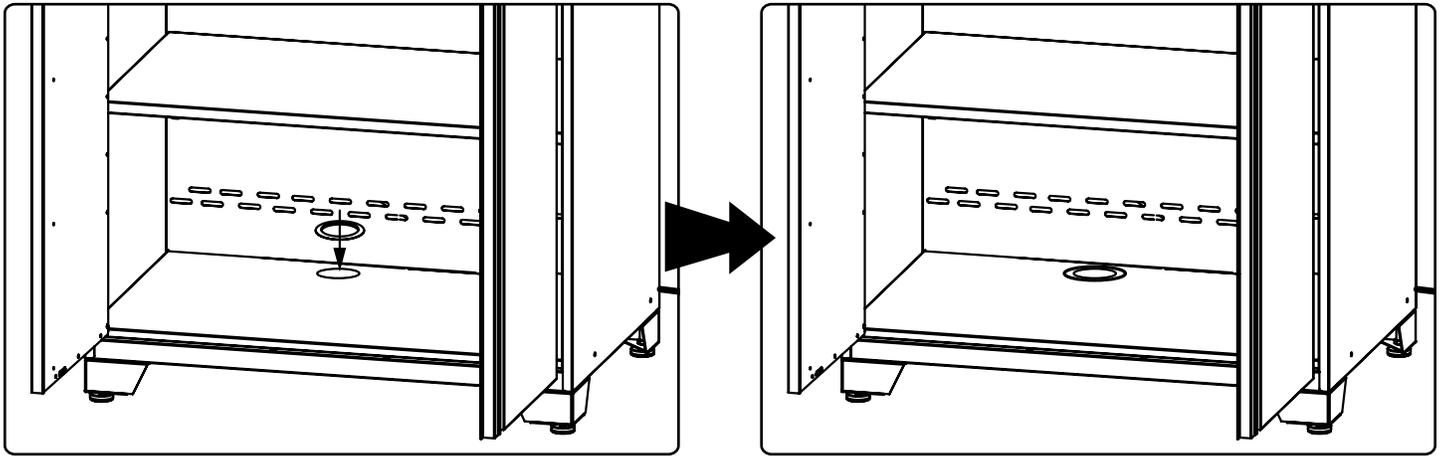

- 2** 配線口により、電源コンセントに簡単に接続できます。

